







INSTALLATION+USER

# Instructions

Single Step

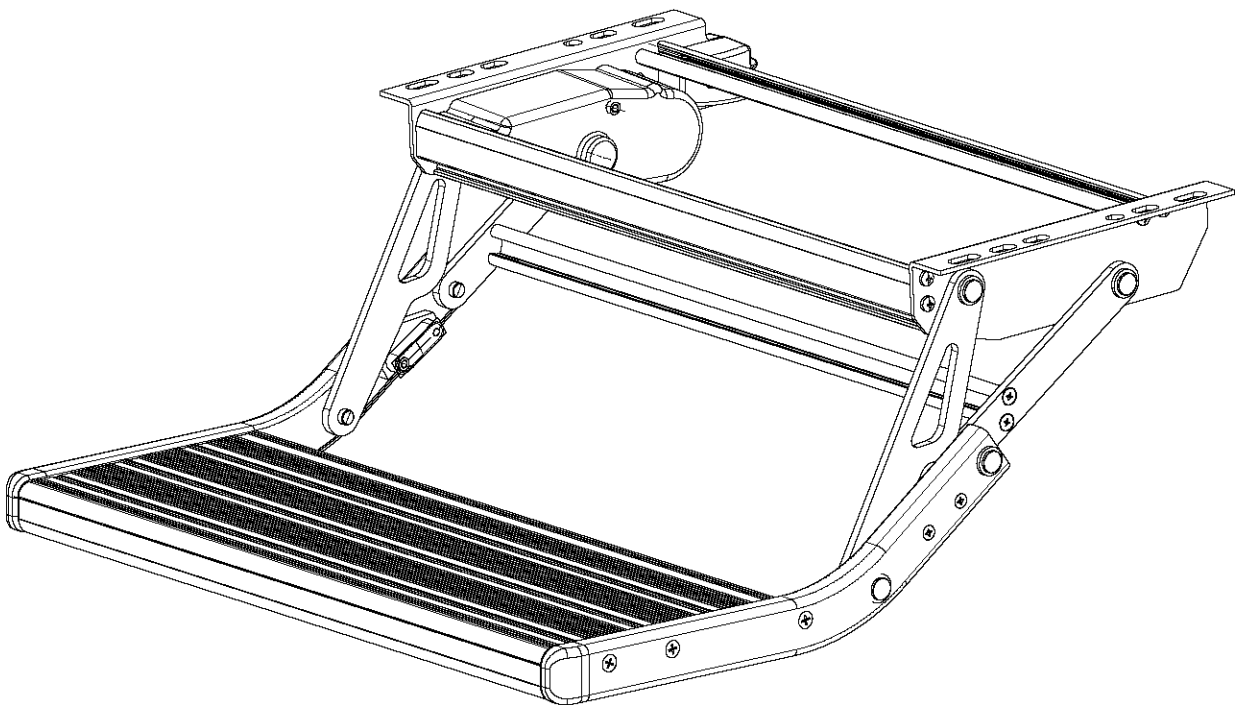


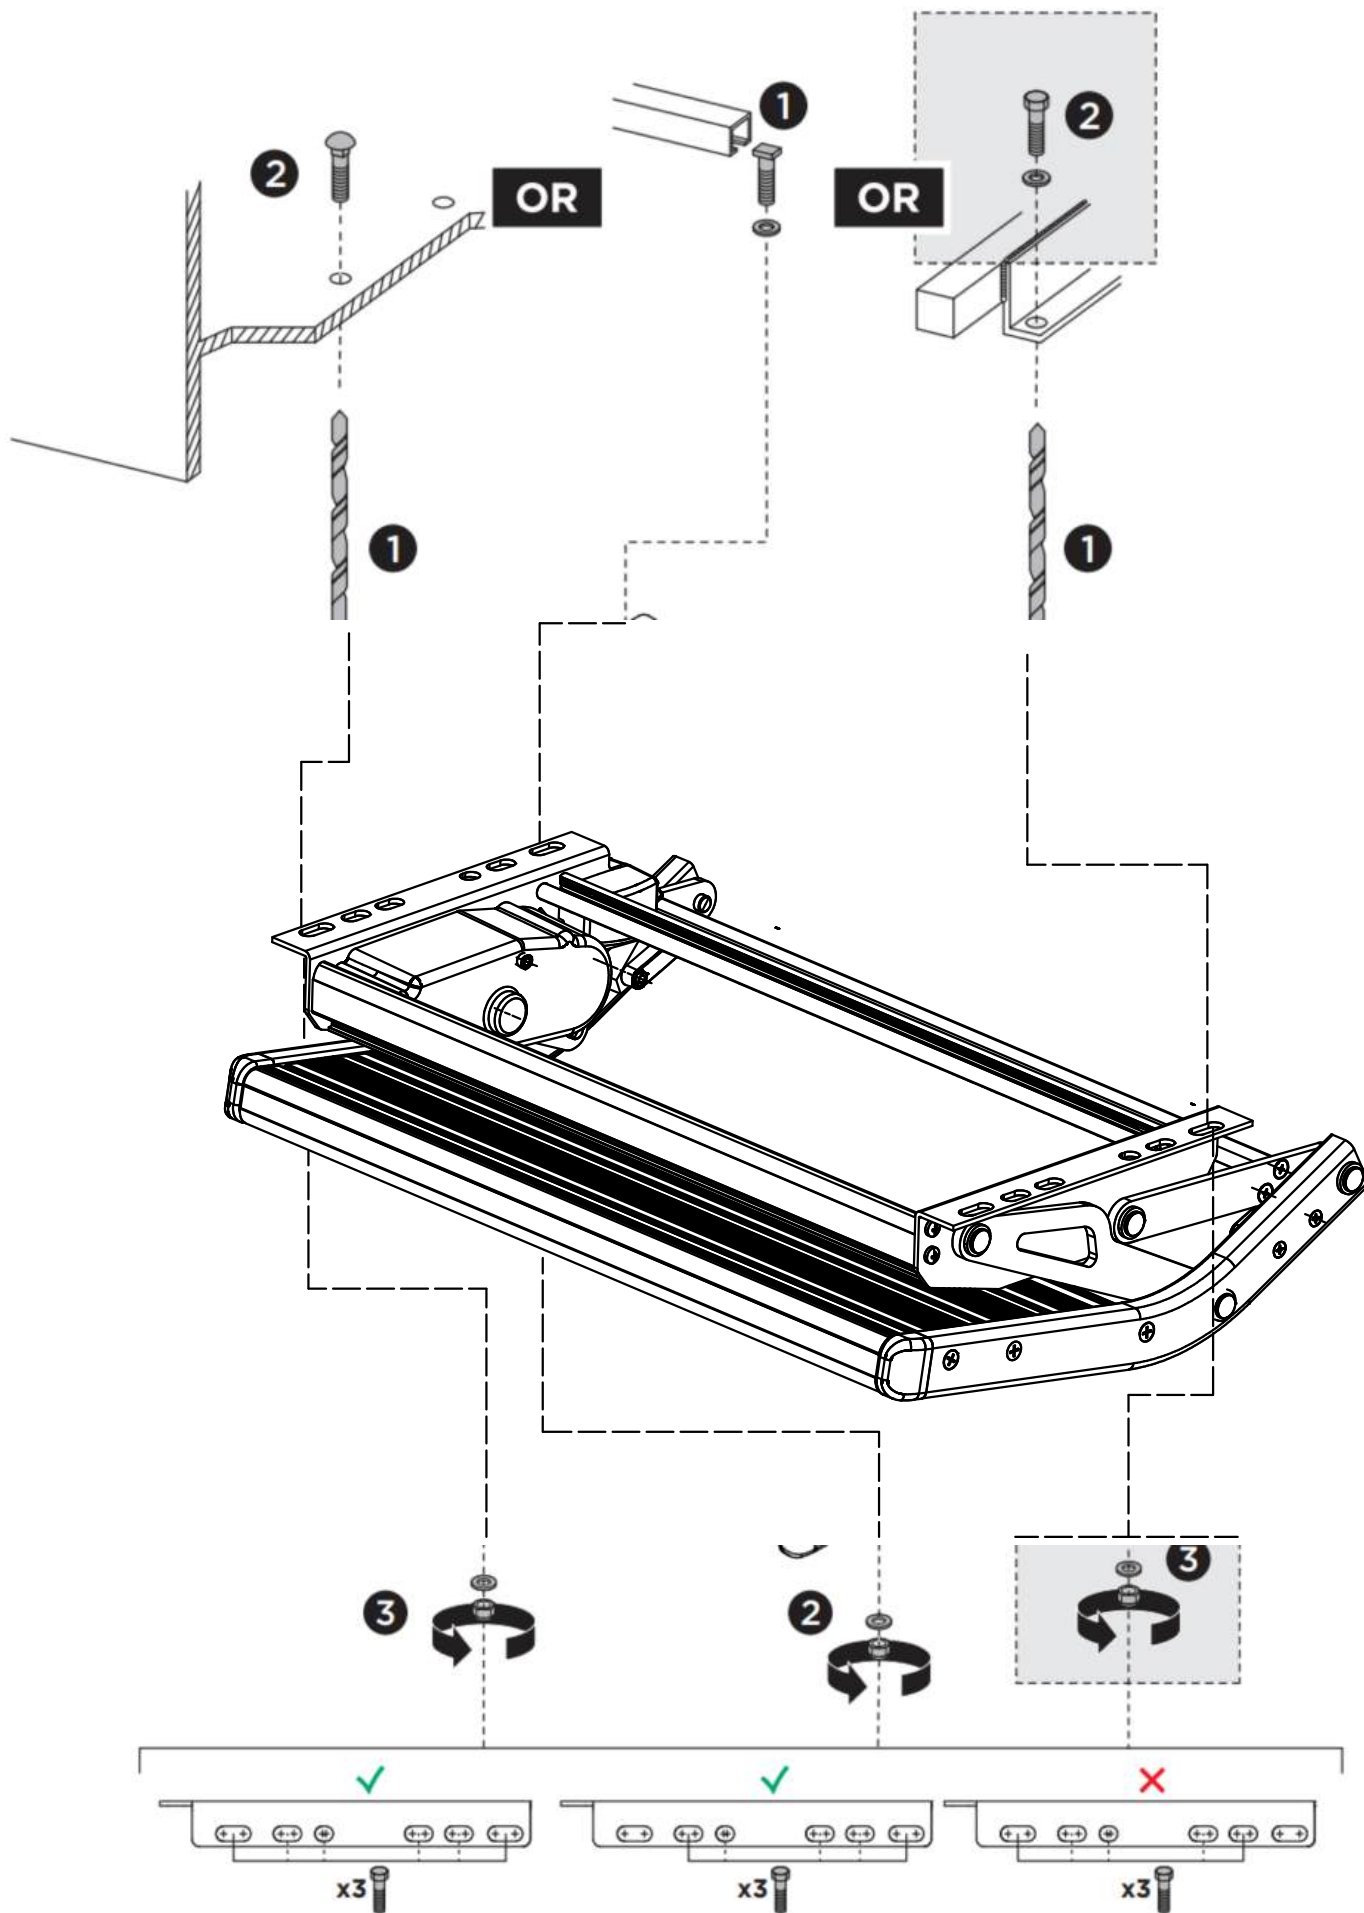

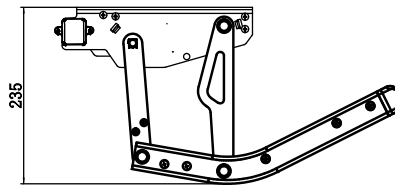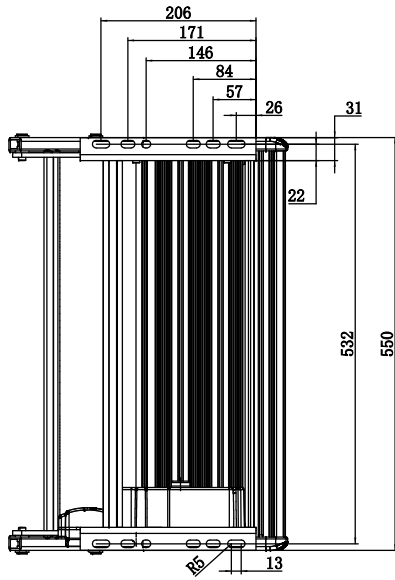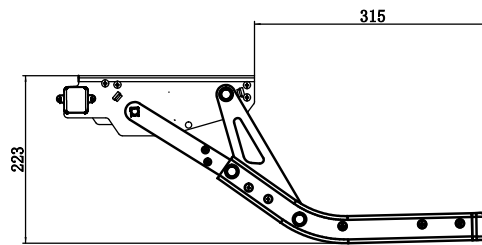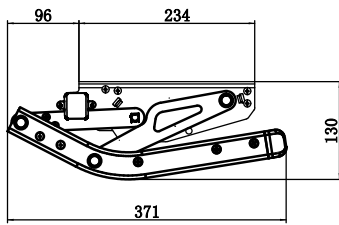


# MANUAL RELEASE


1

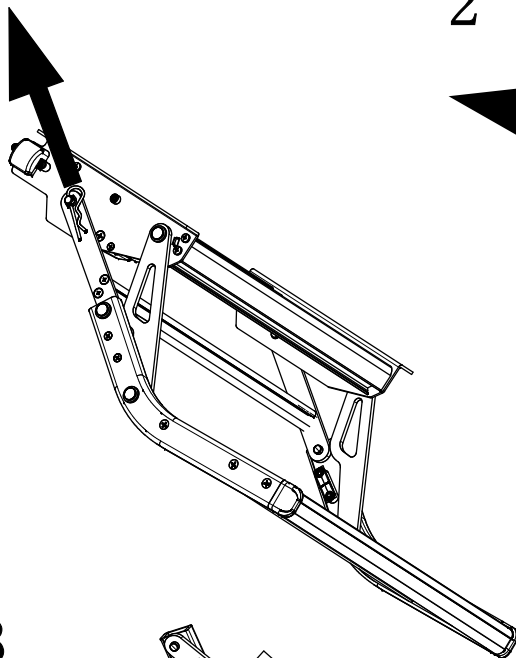


2

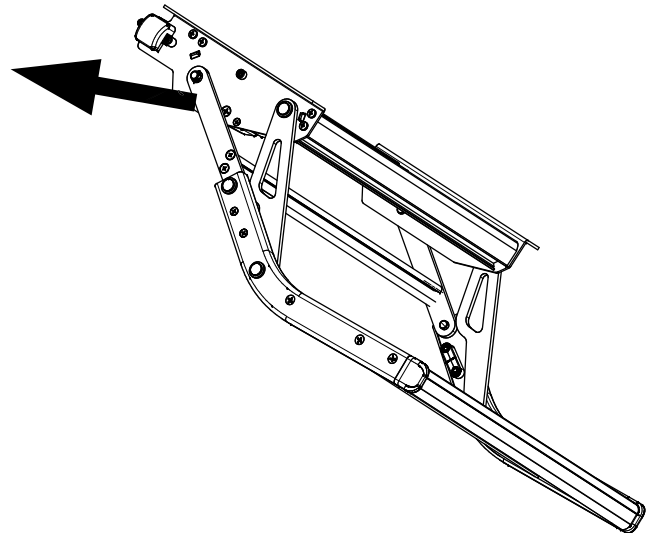

3

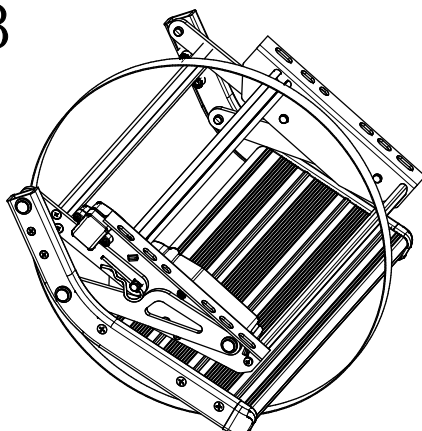

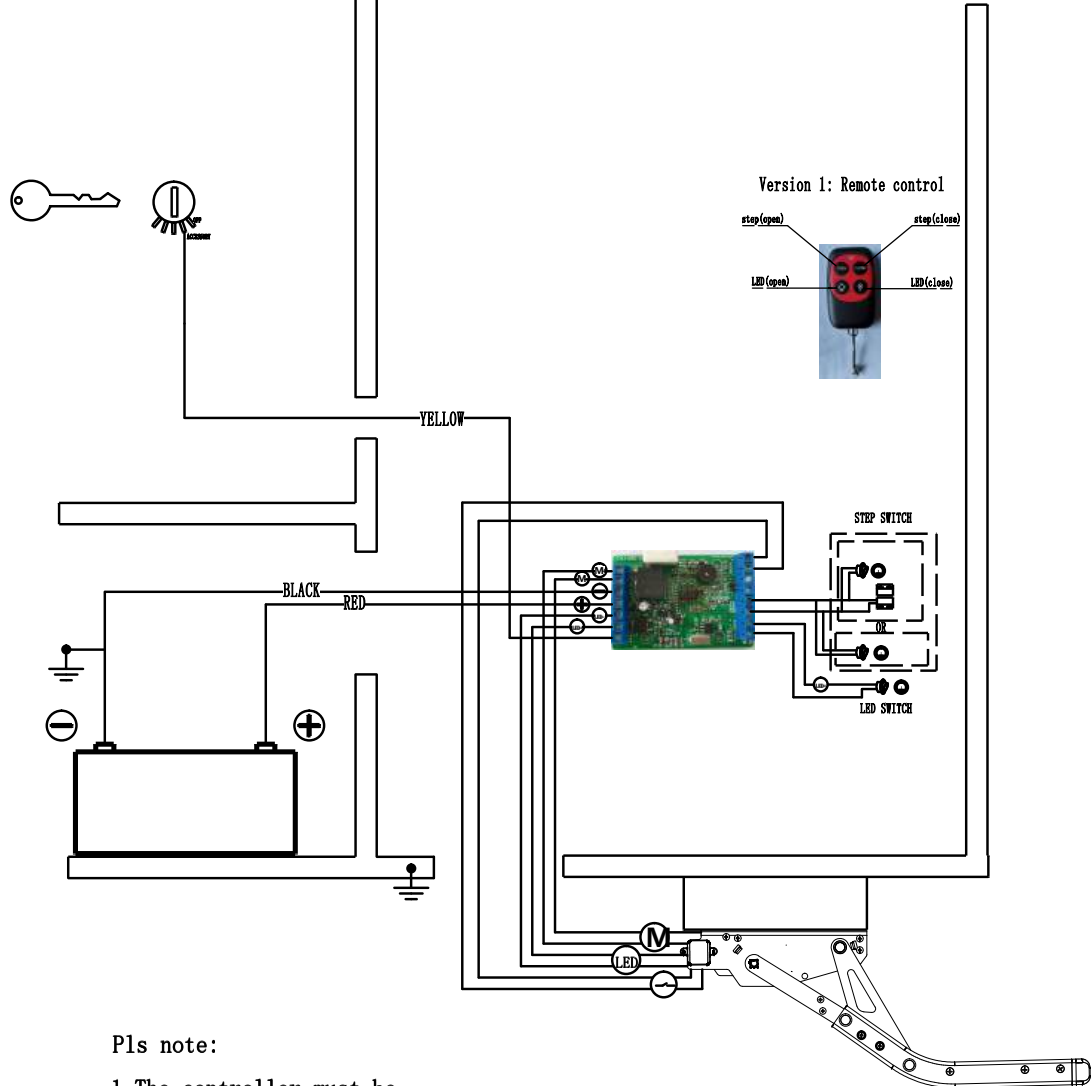


Pls note:

1. The controller must be installed in the car
2. You should step on the pedal under full open or else the motor and gear must be damaged


OR



## Version 1: Remote control

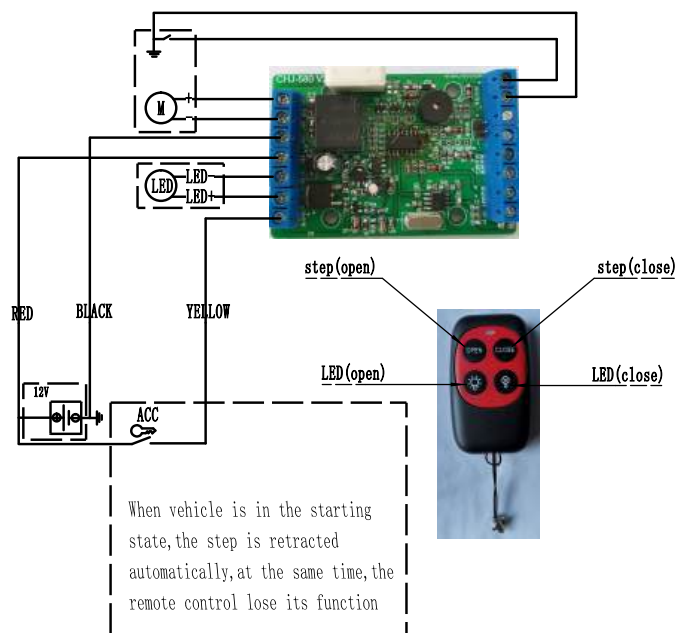

## Version 2: Gate control

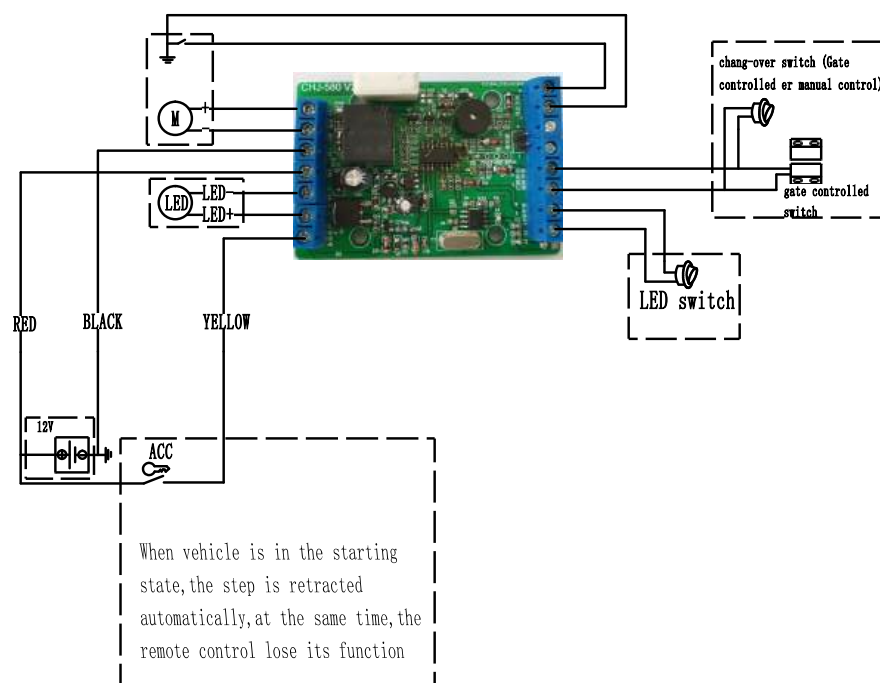

## Version 3: Manual control

