

EVOLine

ASTRALPOOL 

MODELS	EVOLine 6	EVOLine 10	EVOLine 13	EVOLine 15	EVOLine 20	EVOLine 25	EVOLine 35
CODES	66069	66070	66071	66072	66073	66074	66075



EN **HEATPUMP**
Instruction Manual
P3-P34

ES **BOMBA DE CALOR
PARA PISCINA**
Manual de Instrucciones
1-26 (P37-P62)

FR **POMPE À CHALEUR**
Manuel d'instructions
1-26 (P65-P90)

DE **WÄRMEPUMPE**
Bedienungsanleitung
1-26 (P93-P118)

IT **POMPA DI CALORE**
Manuale delle istruzioni
1-28 (P121-P148)

PT **BOMBA DE CALOR**
Manual de instruções
1-28 (P151-P176)



WE RESERVE THE RIGHT TO CHANGE ALL OR PART OF THE FEATURES OF THE ARTICLES OR CONTENTS THIS DOCUMENT WITHOUT NOTICE.

Nos reservamos el derecho de cambiar total o parcialmente las características de nuestros artículos o contenido de este documento sin previo aviso.

. Nous nous réservons le droit de modifier totalement ou en partie les caractéristiques de nos articles ou le contenu de ce document sans préavis.

Wir behalten uns das recht vor die eigenschaften unserer produkte oder den inhalt diese prospektes teilweise oder wollstanding, ohne vorherige benachichtigung su andern.

Ci riservamo il diritto di cambiare totalmente o parzialmente le caratteristiche tecniche dei nostri prodotti ed il contenuto di questo documento senza nessun preavviso.

Reservamo-nos no direito de alterar, total ou parcialmente as características os nossos artigos ou o conteúdo deste documento sem aviso prévio.

1. Performance and installation

1.1 Performance and features

✓ High efficiency

With a COP value up to 5.0 our heat pumps are very efficient when transferring heat from the air to the swimming pool water. You can save as much as 80% of cost compared to an electrical heater.



✓ Long life-span

The heat exchanger is made of PVC & Titanium tube, which can withstand and prolong exposure to swimming pool water.

✓ Easy control and operation

The unit is very easy to operate: simply switch it on and set the desired pool water temperature. The system includes a micro-computer controller, allowing all operation parameters to be set. Operation status can be displayed on the controller with LED display.

1.2 Working principles

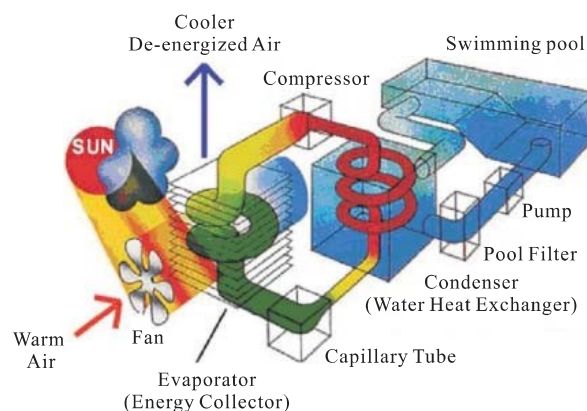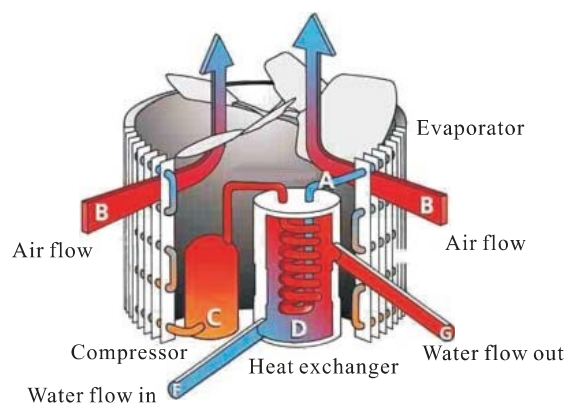

✓ Heat pumps utilize the sun's free heat by collecting and absorbing energy from the outside air.

This energy is then compressed and transferred to the pool water. Your existing water pump circulates the water through the heater, usually next to the pool equipment, and the water warms up. The heat pump timer could be set to operate during daylight hours, for example, usually 9am to 5pm.

✓ The unit contains a fan that draws in outside air and directs it over the surface of the EVAPORATOR (energy collector). The liquid refrigerant within the EVAPORATOR coil absorbs the heat from the outside air becomes a gas.

✓ The warm gas in the coil passes through the COMPRESSOR concentrating and increasing the heat to form a very hot gas which then passes to the CONDENSER (water heat exchanger). It is here that the heat exchange occurs as the hot gas gives off heat to the cool swimming pool water circulating through the coil.

✓ The pool water becomes warmer, and the hot gas cooling as it flows through the CONDENSER coil returns to its liquid form and, after passing on through the CAPILLARY TUBE, the whole process begins again.

✓ The state of the heat pump technology can efficiently collect heat from the outside air down to the 7°C to 10 range. For tropic and subtropical climates, this means that the pool can be maintained at 26°C to 32°C


1.3 Location of heat pump installation

The unit will perform well on any location provided three factors are present:

1. Fresh air - 2. Electricity - 3. Pool filter piping

The unit may be installed virtually anywhere outdoors providing minimum distance requirements are met with respect to other objects (see diagram below). For indoor pools please consult your installer. If the unit is placed in a windy area, no problems occur with e.g. the pilot light, as opposed to what is often the case with gas heaters.

Attention: Do not place the unit in an enclosed area with a limited air volume where the unit's discharged air will be re-circulated or near shrubs that could block the air inlet. These locations deny the unit a continuous fresh air supply, which reduces its efficiency and may prevent adequate heat yield. See diagram below for minimum required distances.

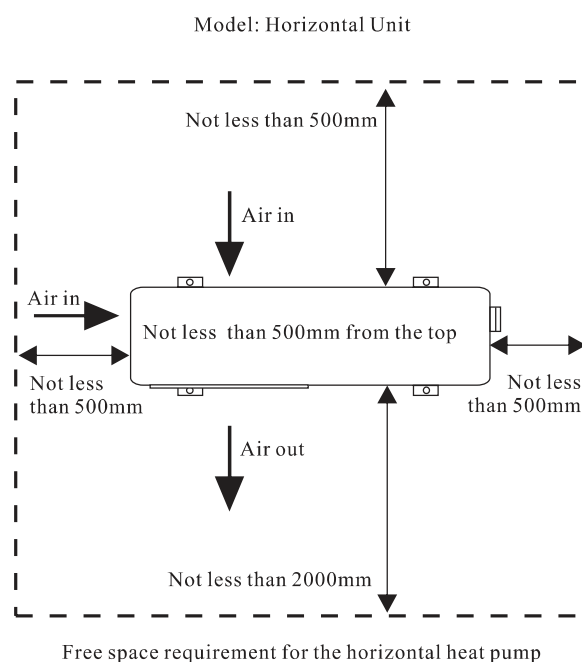

Cautions

- Do not put your hands or any other object into the air outlet and fan. It could damage the heat pump and cause injuries.
- In case any abnormality was found in the heat pump, please cut off the power at once and contact a professional technician.
- It is strongly suggested to place a guard around the machine to keep children away from the heat pump.


1.4 Distance from the pool

Normally, the pool heat pump is installed within a 7.5 meter radius of the pool. The greater the distance from the pool, the greater the heat loss from the piping. Since the piping is buried for the most part, heat loss is minimal for distances of up to 30 meters (15 meters to and from the pump= 30 meters total), unless the soil is wet or the water level is high. Heat loss per 30 meters could roughly be estimated at 0.6 kw-hour (2000 BTU) for every 5 °C temperature difference between the pool water and the soil surrounding the pipe, which translates to an operation time increase of 3-5%.


1.5 Installation of the check-valve

Attention- When using automatic chlorine and PH dosage systems, it is of uttermost importance to protect the heat pump from high concentrations of these chemicals that could corrode the heat exchanger. Therefore, such systems should add the chemicals in the conduits located **DOWNSTREAM** of the heat pump and it is recommended to install a check-valve in order to prevent backflow when there is no water circulation.


Damage to the heat pump caused by disregarding any of these recommendations will invalidate the warranty.

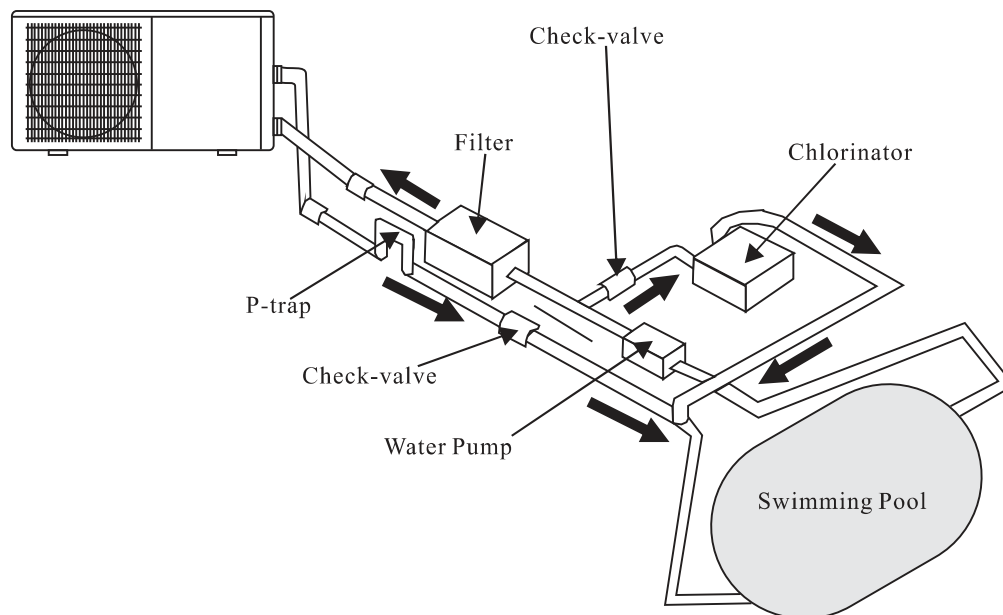

1.6 Pool system set up

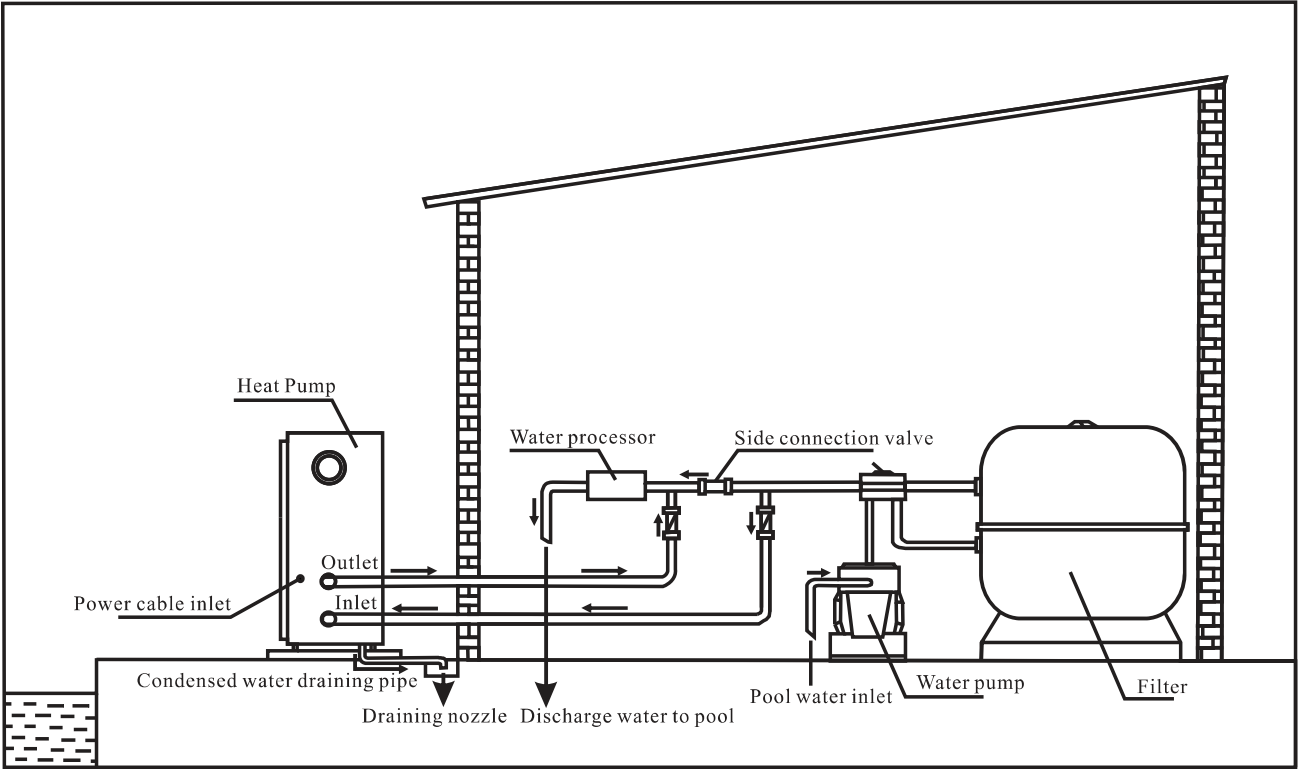

1.7 Connecting the by-pass

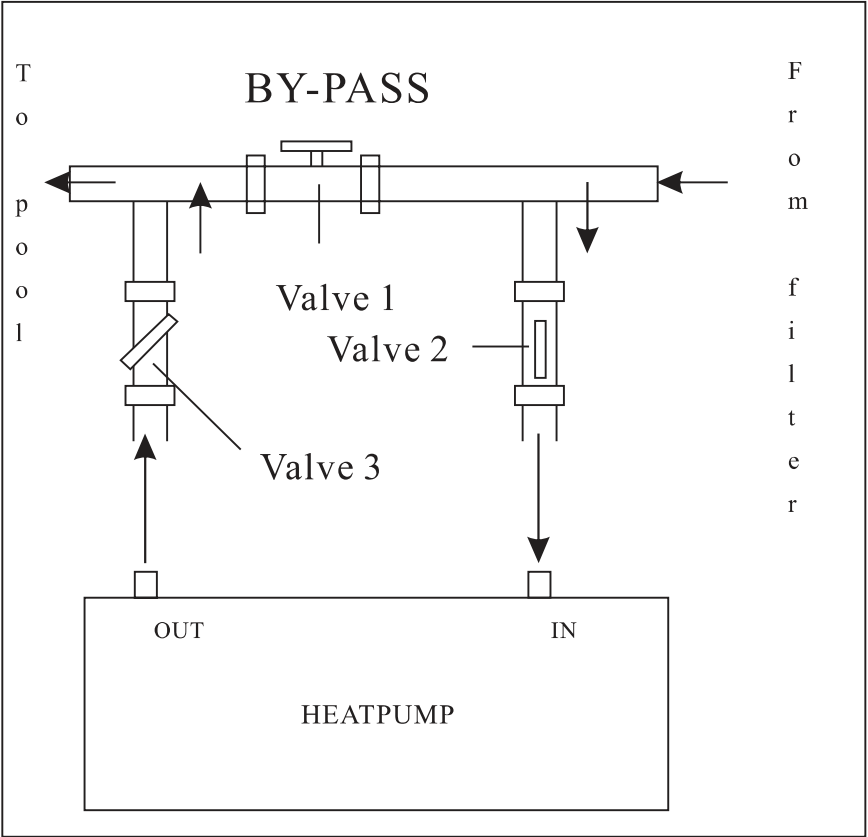

1.8 Warning:

- Do not place your hand or any other objects into the air outlet and fan. It could damage the heat pump and cause injuries;

- In case of any abnormality with the heat pump, cut off the power immediately and contact a professional technician;

It is strongly advised to place a protective guard around the unit to keep children away from the heat pump.

An authorized electrician must connect the Heat Pump to the power. (230V 1ph or 400V 3ph)

Important—Although the heat pump is electrically isolated from the rest of the unit, this only prevents the passage of electricity to or from the pool water. Grounding the unit is still required to protect yourself from short circuits inside the unit. Make for adequate ground connection.

Check if the electrical mains voltage corresponds with the operating voltage of the heat pump prior to hooking up the unit.

FIGURE 1 – POWER CONNECTION on page 32

1.9 First time start-up

Note- In order for the unit to heat the pool (or spa), the filter pump must be running so that the water can circulate through the heat pump. Without this circulation, the heat pump will not start.

When all connections have been made and checked, the following steps should be followed:

- 1). Turn on the filter pump. Check for leaks.
- 2). Turn on the electrical power supply to the unit, then press the ON/OFF key on the electronic control panel. The unit should start when the time delay period has elapsed.
- 3). When the unit has been running for a couple of minutes, check if the air leaving the unit is cooler than the ambient temp.
- 4). Check the performance of the flow switch as follows: with the unit running turn the filter pump off. The unit should also switch off automatically.
- 5). The unit and the filter pump should run 24 hours a day until the desired pool water temperature has been reached. Once the set temperature is reached, the unit will switch itself off. As long as the filter pump is running, the unit will restart automatically when the temperature of the pool water drops more than 1°C below the set temperature.

Depending on the starting temperature of the pool water and the air temperature, it can take several days for the water to reach the desired temperature. Covering the pool can drastically reduced this period.

Water flow switch—the unit is equipped with a flow switch that is switched on when enough water has flowed through the unit and that is switched off when the water flow becomes too low. (E.g. When the filter pump is switched off).

Time delay— the unit is equipped with a built-in 3-minute start delay included to protect electrical components and contacts. After this time delay, the unit will automatically be restarted. Even a brief interruption of the power supply will activate the start delay and prevent the unit from starting immediately. Additional interruptions of the power supply during the delay period will have no effect on the 3-minute countdown.


1.10 Condensation

When the swimming pool water is being heated by the heat pump, the incoming air is cooled down quite a bit, which can cause condensation on the fins of the evaporator. Condensed volumes can attain several litres per hour under high atmospheric humidity. Sometimes, this is wrongfully interpreted as a water leak.

2. Operation of heat pump

2.1 Operation of control display

2.1.1 Control display illustration:

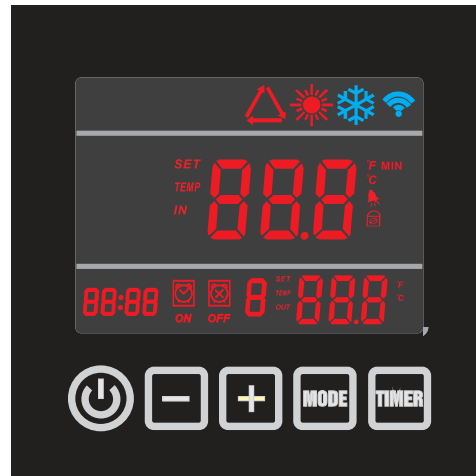

When heat pump is supplied with power, controller will display with full screen, shows that it is already connected. If connection fails in 10 seconds, please check connections between communication cable and control display, or replace with another control display.

Button functions:

 button: ON/OFF switch to start or stop heat pump.


TIMER button: Timer button to set timer on and timer off.

MODE button: To switch between heating, cooling and auto mode.

To enter parameter settings and confirm settings.


“+” “-” button: To increase or decrease value.

Icons definitions:


 --heating icon, showing heat pump is in heating mode.

 --cooling icon, showing heat pump is in cooling mode.

 --auto icon, showing heat pump is in auto mode.

 --alarm icon, showing system alarm.

 --key pad lock icon, showing buttons on the control display are locked.

 --wifi signal.

Note: 1. Heat pump is not equipped with electric heater internally, only provides terminal for external connection.

2. Fan speed is automatically controlled by ambient temperature, not manually.

2.1.2Power ON/OFF heat pump


Press  button 5S to switch on heat pump.
Once the heat pump is powered on all related running component icons will be lightened as well as POWER displayed in the middle of display to show system is in running status.
Figure 2-2 shows heat pump in standby status and figure 2-3 shows heat pump in running status.
The left temperature shows flow water temperature while the right temperature is the return water temperature.

 




Figure 2-2



Figure 2-3

2.1.3 How to change mode

Press MODE button to select auto, heating or cooling mode, related indicator icon will be lightened asa symbol to show heat pump is in either auto  , heating  or cooling  mode.

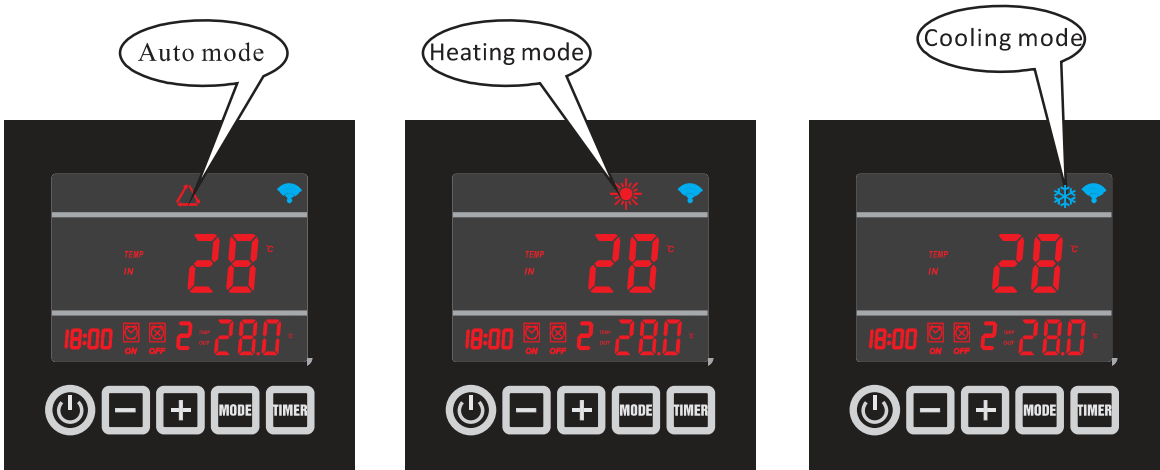


Figure 2-4

2.1.4 Adjust desired water temperature

1. First select desired mode, auto, heating or cooling.
2. No matter the heat pump is under standby status or running status, press “+” or “-”, display will show the desired water temp. of selected mode with a flashing value, then change the water temp. by moving “+” or “-” as requested. (Filter must run to test the water temp.)

2.1.5 Check and set parameters

When heat pump is in standby status, press **MODE** button for 5 seconds display will show parameter number with value flashing together.

Move “+” and “-” button to check required parameter settings.

Select desired parameter and press **MODE** button for resetting parameter. Parameter number stays fixed while parameter value remains flashing.

Move “+” and “-” button to adjust the value.

Press **MODE** button to confirm the setting.

Without any further movement on the display button in 2min it will return to main interface automatically.

See Parameter table for more details.

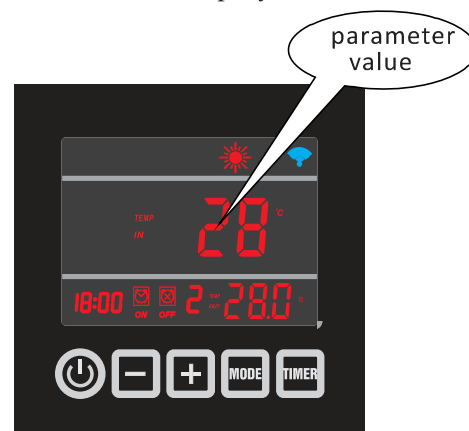


Figure 2-5

Note: All parameters can be changed ONLY under standby status !

2.1.6. Setting Time

Press **TIMER** button 5S in a quick stop to activate time setting.

When hour numbers are flashing it is available for revision move “+” or “-” to fix hour numbers.

Press **TIMER** button to confirm hour setting.

Minute numbers start flashing once the hour numbers are confirmed, move “+” or “-” to fix minute numbers.

Press **TIMER** button to confirm minute setting.

2.1.7 Setting Timer on/ Timer off

Press **TIMER** button to enter timer setting for **TIMER 1**.

Hour data will be flashing with ON, move “+” or “-” to set it.

Confirm timer on hour setting by pressing **TIMER** button.

Minute data starts flashing once hour setting is confirmed, move “+” or “-” to set it.

Confirm timer on minute setting by pressing **TIMER** button.

Press **TIMER** button, and then **MODE** button. The “☑ ☒” signal will flash, then press

“+”button to change to **TIMER 2** or **TIMER 3**.

Hour data will be flashing with ON, move “+” or “-” to set it.

Confirm timer on hour setting by pressing **TIMER** button.

Minute data starts flashing once hour setting is confirmed, move “+” or “-” to set it.

Confirm timer on minute setting by pressing **TIMER** button.

Once Timer on is set and confirmed Timer off will be activated.

Follow the same steps as setting Timer on to set Timer off.

2.1.8 Cancellation of Timer off

If the starting time is set to be the same as the finishing time, then the timer function is off.

The “☑ ☒” signal will be off.



Figure 2-6

2.1.9 Key pad lock

Press “+”and “-”button together for 5 seconds, display will show lock icon. Do this again to unlock.

Parameter table overview (1/2)

Parameter	Manual Description	APP Description	Range	Default	Remark
00	Temp. Setting Cooling	Temp. Setting Cooling	8~37℃	12℃	Adjustable
01	Temp. Setting Heating	Temp. Setting Heating	8~40℃	28℃	Adjustable
02	Time between defrosting cycles	Time between Defrosting	10~90Min	45Min	Adjustable
03	Evaporator temp. Defrost start	Evaporator Temp. Defrost start	-30~0℃	-7℃	Adjustable
04	Evaporator temp. Defrost stop	Evaporator Temp. Defrost stop	2~30℃	13℃	Adjustable
05	Defrosting time	Defrosting time	1~12Min	8Min	Adjustable
06	Number of Refrigerant system	Number of Refrigerant system	1~4	1	Adjustable
07	Power-off memory setting	Power-off Memory Setting	0(No)/1(Yes)	1 (Yes)	Adjustable
08	Type of unit (0=only cooling/1=heat pump/ 2=EI. Heating/3=hot water)	Type of Unit	0~3	1 (heat pump)	Adjustable
09*	Filter pump setting (0=always running / 1=filter pump stop 30sec after compressor, filter pump start every 2 hours checking inlet temp., will run for 5 min, in this period will disregard the flow switch)	Filter Pump Setting	0~1	0	Adjustable
10	Temp. Setting for running AUTO Mode	Temp. setting AUTO	8~40℃	28℃	Adjustable
11	Delta Temp. Start-Stop	Delta Temp. Start-Stop	1~20℃	2℃	Adjustable
12	Setting of Superheating Target for Electric Expansion Valve(EEV)	Setting of Superheating Target for EEV	-15~15	5	Adjustable
13	Setting of Calculating Factor for EEV	Setting of Calculating Factor for EEV	10~50	35	N×10 (valid when 15 set 0)
14	Opening Setting of EEV	Opening Setting of EEV	10~50	35	N×10
15**	EEV Setting (0>manual, in manual parameter 13 and 14 is enabled / 1= automatic, in Automatic parameter 13 & 14 disabled only Parameter 12 is valid)	EEV Setting(0/1)	0(manual)/ 1(automatic)	1	Adjustable
16	4 way valve direction (0=heating / 1=cooling)	4 way Valve Direction	0(heating)/ 1(cooling)	0	Adjustable
17	Water freezing protection setting ambient temperature or Function	Water freezing protection Air	0~15℃	0℃	Adjustable
18	Setting Inlet water Anti-freezing Parameter	Anti-freezing (Inlet-water)	2~14℃	4℃	Adjustable

Parameter table overview (2/2)

Parameter	Manual Description	APP Description	Range	Default	Remark
19	Setting of heat exchange ice protection Tout (too low water flow)	Protection water outlet temp. cooling	3~20℃	5℃	Adjustable
20	Protection setting of In-Out water temperature	Protection In-Out water	5~20℃	13℃	Adjustable
21	Protection water outlet temp. heating	Protection water outlet temp. heating	20~90℃	60℃	Adjustable
22	Time delay of compressor start (after filter pump start)	Delay of compressor start	5~99S	60S	Adjustable
23	Time delay of filter pump stop (after compressor stop)	Delay of filter pump stop	5~99S	30S	Adjustable
24	Setting Ambient temp. to Start bottom heater	Bottom Heater Start	0~20℃	7℃	Adjustable
25	Setting Ambient temp. to change fan speed	Setting Fan Speed Temp	5~40℃	27℃	Adjustable
26	Change Fahrenheit/C(0=C/1=F)	Fahrenheit/C	0(C)/1(F)	0	Adjustable
27	Factory reset	Factory Reset	0(Reset)/ 1(Existing Setting)	1	Adjustable

Remarks: To change the factory default via the phone, password is required and only available for technician.

* Run 5min/2hr=filter pump runs 5 min every 2 hours checking inlet temp., will run for 5 min, in this period will disregard the flow switch .

** (0=manual, in manual parameter 13 and 14 is enabled/1=automatic, in Automatic parameter 13 disabled only Parameter 12 & 14 is valid.)

System measure value overview (2)

Parameter	Description	Range	Remark
T0	Water inlet temp.	-9~99℃	Measured Value
T1	Water outlet temp.	-9~99℃	Measured Value
T2	Evaporator coil temp.	-9~99℃	Measured Value
T3	Ambient temp.	-9~99℃	Measured Value
T4	Compressor receiver temp.	-9~99℃	Measured Value
T5	Opening of EEV	10~50(1=10P)	Measured Value
T6	Not used	-9~99℃	Measured Value
T7	Not used	-9~99℃	Measured Value

Remarks: “Γ” =“T”, e.g. “Γ0”=T0".

2.2. Operation of APP controller


2.2.1 working principle of APP control

Requirements for Android System:

1. System version above 2.3.7 (2.3.7 not included).
2. Resolution 480*800 and above.
3. APK 40M and above, TF card or build-in storage.
4. Requiring the system to have remaining 100 MB of storage.

Requirements for iPhone iOS System:

1. For ios system version 8.x and above.
2. For iphone 4s and latter ones.
3. At least 40M of storage remaining in the phone.

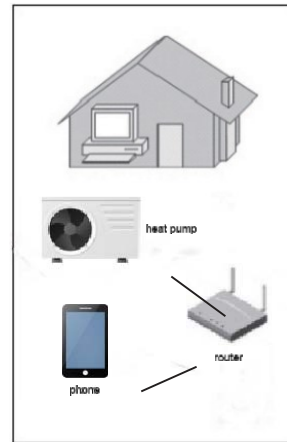


A. WIFI module connection

2.2.2 Set up of the network.


- 1). Download “ASTRAL POOL HEAT PUMP” and install it.




ASTRAL POOL heat pump APP

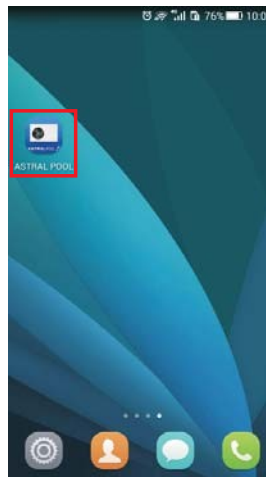

- 2). Make sure your phone is connected to your WIFI module.

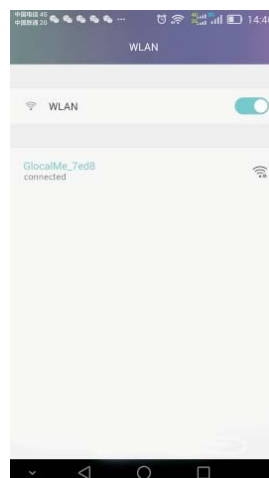

- 3) Start the heat pump and press button "-" and button "TIMER" on the control display together for 3 seconds to activate the control display WIFI. WIFI icon starts blinking and search the WIFI nearby.

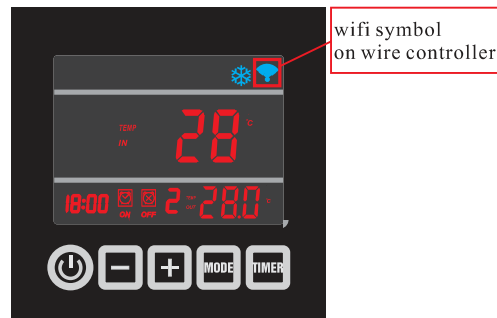


- 4).Click the “Astral Pool” icon and start it.



- 5) Click button “+” and choose “new device”.

With the connected WIFI name shown , fill in WIFI password and click “Search”.It will take maximum 120 seconds to connect the control display through the connected WIFI module.


Once the WIFI icon remains ON the connection between your phone and control display has been set up.

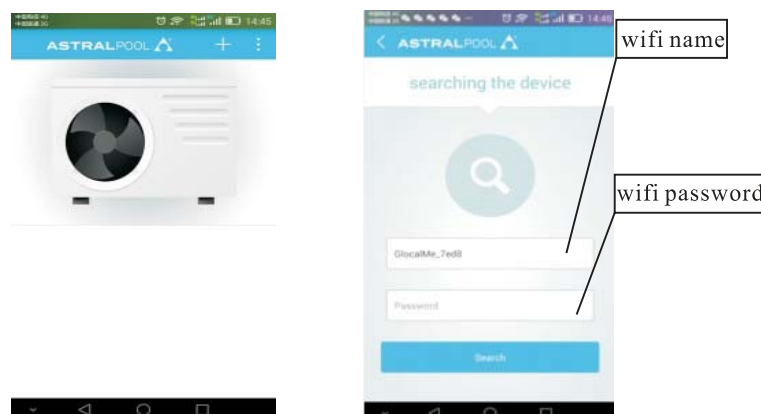

6) Insert default password of the device “123456”, and click “Bar code” to scan the serial number of heat pump which is below the data plate on the side panel of the heat pump.

Put the serial number inside the scanning area and make sure the red scanning line stay on the serial number.


Soon after the serial number is scanned press “confirm” to enter the main interface. There will be a gentle reminder of changing the password. Set the new password and it will go to operational page.

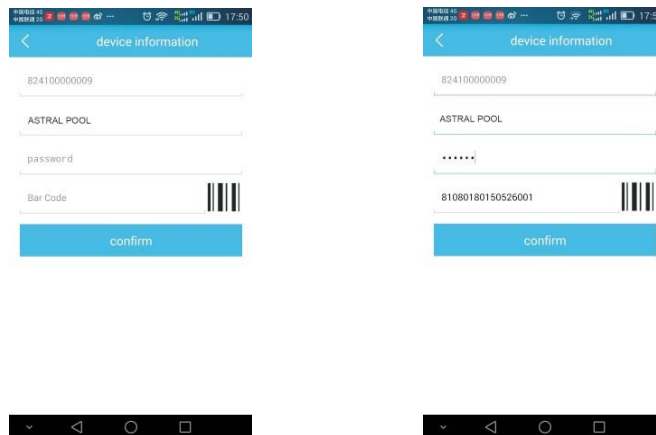


Now the connection between your heat pump and APP are well set up !

2.2.3 APP operation


1). Illustration of operational page.

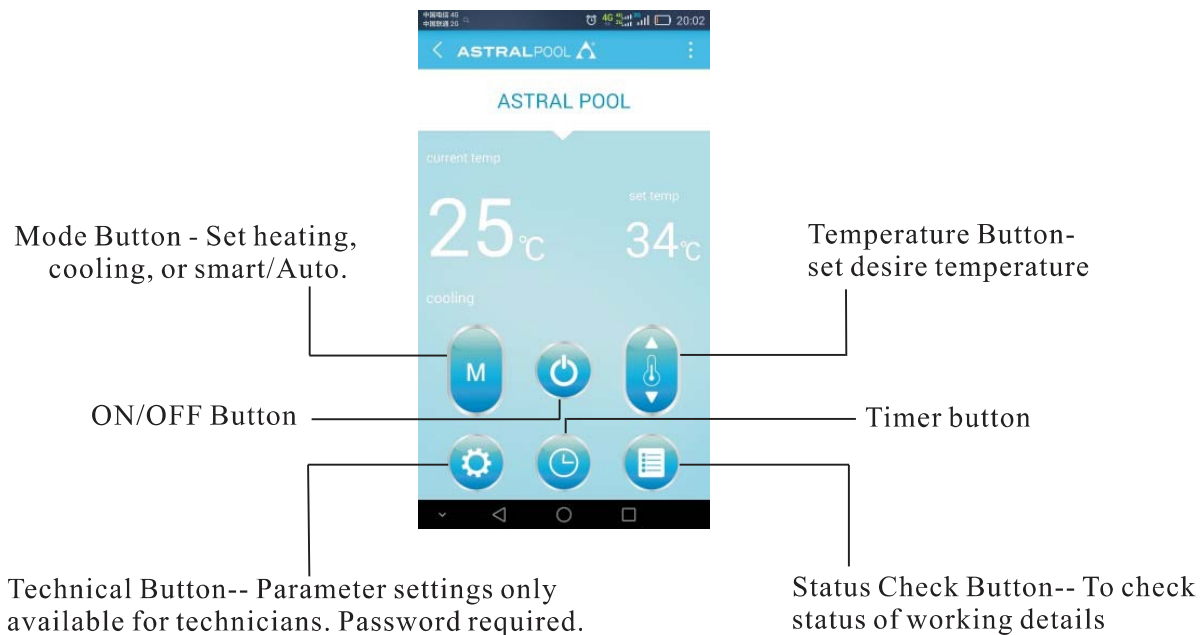

2).How to switch on/off the heat pump.

Click  Button to turn on/off the unit.


3).How to change mode




Press  to select auto(smart), heating, or cooling mode.

4).How to set desired water temperature

Click  to modify the water temperature.


5).How to set timer

- a. Click the  to enter the timer page;
- b. Click “Timer On”, move up and down to set the time for Timer On
- c. Do the same to set “Timer Off”.
- d. Finally click “save” to confirm.
- e. The latest Timer On /Off will also show on the operational page.
- e. There are maximum 3 timers can be set.

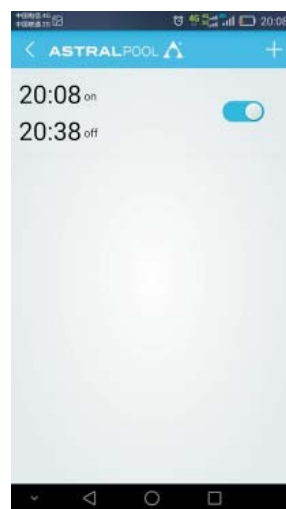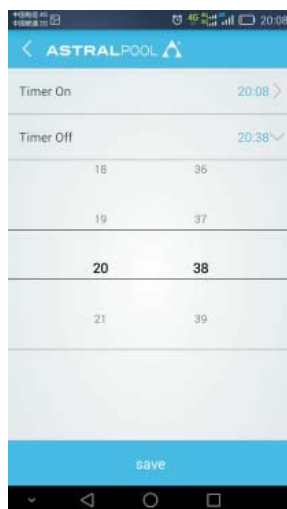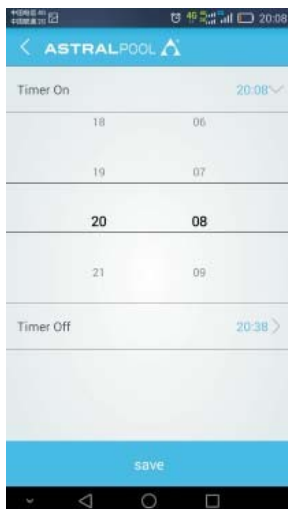


6).How to check details of running status

In running or standby status, click  to check system measured value and working details.


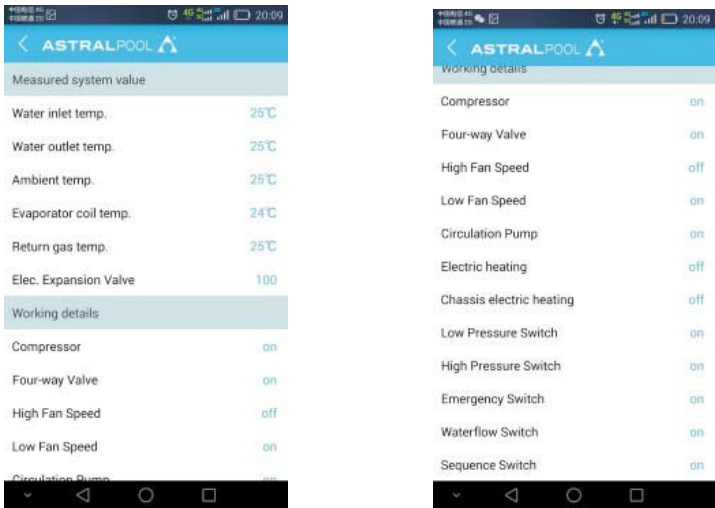


7).How to change parameter setting



(Password is required to change the factory default setting , only available for technician.)
Insert technical password to enter technical setting page.

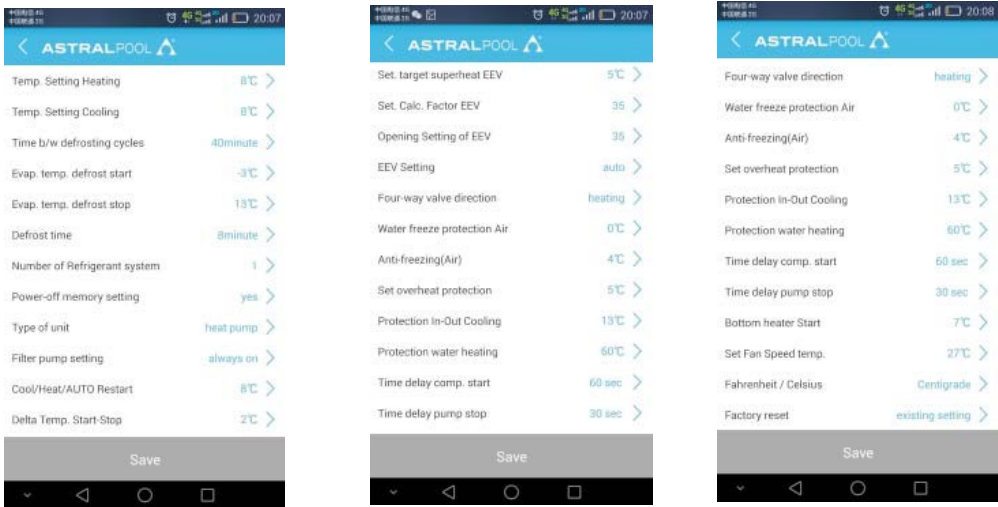

8).How to rename the device.

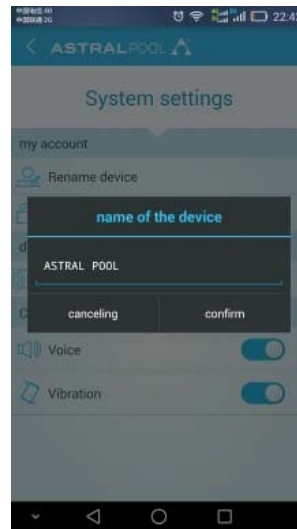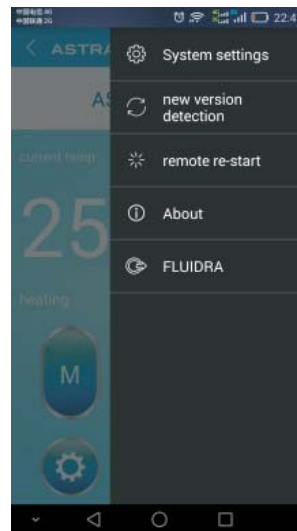

9).How to change user's password

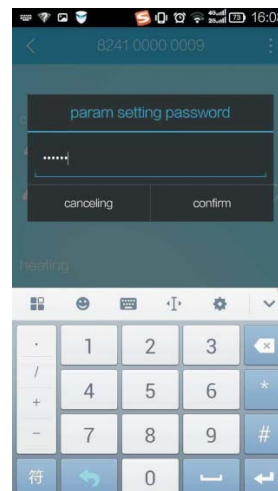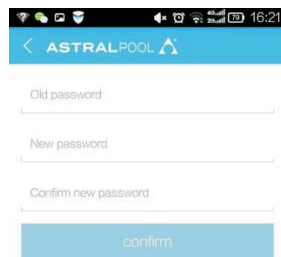

3. Protection systems

3.1 Water flow switch

Equipped with flow switch the heat pump will not work when the filter pump is not working (and the water is not circulating).

This system prevents the heat pump from heating only the water present in the heat pump itself.

The protection also stops the heat pump if water circulation is cut off or stopped.

3.2 Refrigerant gas high and low pressure protection

The high pressure protection makes sure the heat pump is not damaged in case of over pressurisation of the gas. The low pressure protection emits a signal when refrigerant is escaping from the conduits and the unit can not be kept running.

3.3 Overheating protection on the compressor

This protection protects the compressor from overheating.

3.4 Automatic defrost control

When the air is very humid and cold, ice can form on the evaporator. In that event, a thin layer of ice appears that will grow increasingly bigger as long as the heat pump is running. When the temperature of the evaporator has become too low, automatic defrost control will be activated, which will reverse the heat pump cycle so that hot refrigerant gas is sent through the evaporator during a brief period of time to defrost it.

3.5 Temperature difference between inflowing and outflowing water

During normal operation of the heat pump, the temperature difference between inflowing and outflowing water will approximate 1 to 2°C. In the event that the pressure switch does not work and that the water stops circulating, the temperature probe monitoring the outflowing water will always detect a rise in temperature. As soon as the temperature difference between inflowing and outflowing water exceeds 13°C, the heat pump will be automatically turned off.

3.6 Low temperature cut-out

If, during cooling, the temperature of the outflowing water reaches 5°C or drops below this temperature, the heat pump will turn itself off until the water temperature reaches or exceeds 7°C again.

3.7 Anti-frost protection during winter

This protection can only be activated if the heat pump is in STAND-BY status.

3.8 First anti-frost protection

If the filter pump is controlled by the heat pump (regardless of the value for parameter 9) and when the water temperature lies between 2 and 4°C, and the air temperature is lower than 0°C, the filter pump will be automatically turned on to prevent the water from freezing in the piping. This protection is deactivated when the temperature rises again.

3.9 Second anti-frost protection

If the water temperature drops even more, that is, below 2°C (during long frost periods), the heat pump will also start running to heat the water until its temperature approximates 3°C. When this temperature is reached, the heat pump will stop, but anti-frost protection will remain active until conditions change.

4. Direction

4.1 Swimming pool water chemistry

Special attention should be paid to the chemical balance of the pool water. The pool water values should always stay within the following limits:

	Min	Max
pH	7.0	7.4
Free chlorine(mg/l)	0.5	1.75
TAC(mg/l)	80	120
Salt(g/l)		6

Important: failure to comply with these limits will invalidate the warranty.

Note: exceeding one or several limits can damage the heat pump beyond repair. Always install water-treatment equipment (e.g. chemical dosing systems) after the water outlet of the heat pump, especially if the chemicals are automatically added to the water (e.g. automatic chemical dosing systems).

A check valve should also be installed between the outlet of the heat pump and the water-treatment equipment to prevent products from flowing back into the heat pump if the filter pump stops.

4.2 Heat pump winterizing

Important: failure to take the necessary precautions for winterizing can damage the heat pump, which will invalidate the warranty.

The heat pump, filter pump, filter and conduits must be protected in areas where the temperature can drop below freezing point. Evacuate all water from the heat pumps as follows:

- 1.Disconnect the electrical power supply to the heat pump
- 2.Close the water supply to the heat pump completely.
- 3.Disconnect water inlet and outlet coupling fittings of the heat pump and let the water drain out of the unit. Make sure all water is out of the heat pump.
4. Loosely reattach water inlet and outlet coupler fittings to the heat pump in order to prevent dirt from setting into the conduits.

Note: these precautions should not be taken if you choose to use the built-in anti-frost protection.

4.3 Restarting the pump after winter

If you emptied the heat pump for winterising, follow the steps below to restart it in spring:

- 1.First check that there is no dirt in the conduits and that there are no structural problems
- 2.Check that the water inlet and outlet fittings are adequately fastened. Check that "water inlet" and "water outlet" are correct according to the lables on the heat pump. (Water out from the filter unit = water inlet on heat pump)
- 3.Start the filter pump to start the water flow to the heat pump. Adjust the by-pass so there is enough water through the heat pump. Normally on small filter system the by-pass can be closed, so all circulated water goes through the heat pump.
- 4.Reconnect the electrical power supply to the heat pump and turn the heat pump ON.

4.4 Check-up

Our heat pumps have been built and developed to last long if they have been installed correctly and can operate in normal conditions. Regular check-ups are important if you want your heat pump to function efficiently for many years. Below are some recommendations to ensure optimal working conditions for your heat pump.

- 1). Make sure that the service panel is easily accessible.
- 2). Keep the area surrounding the heat pump free of organic waste.
- 3). Prune any vegetation around the heat pump so that there is sufficient free space around the pump.
- 4). Remove any water sprinklers that are near the heat pump as they could cause directly onto the heat pump from a roof. Install proper drainage.
- 5). Prevent rain from running directly onto the heat pump from a roof. Install proper drainage.
- 6). Do not use the heat pump if it has been flooded. Immediately contact a qualified technician to inspect the heat pump and carry out necessary repair.

Condensation can occur when the heat pump is running. This condensation water can flow away through an opening in the base pan of the unit. The amount of condensation water will increase when humidity is high. Remove any dirt that could block the water outlet on the bottom pan. 5 to 20 liters per day of condensation water can be produced while the unit is running. If more condensation is produced, stop the heat pump and wait for one hour before checking for water leakage (Let the filter pump keep running).

Note: a quick way to verify that the water running is because of the condensation. Shut off the unit and keep the pool pump running. If the water stops running out, it is condensation. AN EVEN QUICKER WAY IS TO TEST THE DRAIN WATER FOR CHLORINE. If no chlorine is detected, the drain water is a result of condensation.

Also make sure that the air in and out passages are free, and prevent air out from immediately re-entering to the air in. (It is important to have min. 2m free space at the air out side of the heat pump).

5. Maintenance and inspection

5.1 Maintenance

- ✓ Check the water inlet and drainage often. The water and air inflow into the system should be sufficient so that its performance and reliability does not get compromised. You should clean the pool filter regularly to avoid damage to the unit caused by clogging of the filter.
- ✓ The area around the unit should be spacious and well ventilated. Clean the sides of the heat pump regularly to maintain good heat exchange and to save energy.
- ✓ Check if all processes in the unit are operational and pay special attention to the operation pressure of the refrigerant system.
- ✓ Check the power supply and cable connections regularly. Should the unit begin to function abnormally or should you notice a smell from an electrical component, arrange for timely repair or replacement.
- ✓ You should also purge the water if the unit will not work for an extended period of time. You should check all parts of the unit thoroughly and completely fill the system with water before turning it on again afterwards.

5.2 Trouble shooting guide

Incorrect installation may result in an electrical charge that could lead to death or serious injury of users, installers or others by electrical shock and it may also cause damage to heat pump.

DO NOT attempt to modify the internal configuration of the heat pump.

1. Keep your hands and hair clear of the fan blades to avoid injury.
2. If you are not familiar with your pool filtration system and heat pump:
 - a. **Do not** attempt to carry out any adjustment or service without consulting your dealer, pool professional or air conditioning contractor.
 - b. Read the entire installation manual before attempting to use, service or make adjustments to the unit.
 - c. Wait for 24 hours after the installation before start the heat pump to prevent damage to the compressor. (If the heat pump has been transported and carried all the time with the feet down, it can be started immediately).

Note: Switch off the power before carrying out any maintenance or repairs

IMPORTANT REMARK: if a malfunction cannot be resolved immediately, in order to analyse the problem we will need to know the message (error code) that is showing on the display controller as well as the values for the settings (parameters 0-A). We also need to know the status of the heat pump : the ambient temperature, water inlet / outlet temperature, if it is cold air coming out from the heat pump, if the grill (Evaporator) is cold, or if there is ice on the heat pump.

Please keep this information at hand when calling customer service (describe the issue).

On the following pages you will find an overview of the different types of failure problems that can occur together with instructions on how to solve them.

Problem :	the heat pump doesn't work
Observation:	the screen does not light up and the fan/compressor doesn't make a sound
Possible cause	Solution
No electrical power supply	Check power supply (wiring, fuses,)

Problem :	the heat pump works normally but there is no or insufficient heating
Observation:	The screen displays the temperature but no error codes
Possible cause	Solution
1. In sufficient capacity of the heat pump in proportion to the size of the swimming pool	1. Install a larger sized model or an extra heat pump. Cover the pool to limit heat loss
2. The compressor works but the fan doesn't	2. Check the electrical wiring of the fan. Replace the condenser or the fan motor if necessary.
3. The fan works but the compressor doesn't	3. Check the electrical wiring of the compressor. Replace the condenser or the compressor if necessary.
4. The heat pump has not been placed on an optimal location	4. Make for sufficient air circulation(see manual for details)
5. Faulty temperature setting	5. Set the correct temperature
6. By-pass not adjusted	6. Have the by-pass readjusted by the installer
7. Massive ice formation on the evaporator	7. Have the settings for automatic defrost control checked by the installer
8. Not enough refrigerant	8. Have the heat pump checked by a refrigeration technician

Problem :	The heat pump works normally but the water is cooling down instead of heating up	
Observation:	The screen displays the temperature but no error codes	
Possible cause		Solution
1.The wrong mode has been selected		1.Verify the parameters, select the correct mode
2. The controller is out of order		2. Check the voltage in the electrical wiring to the 4-way valve. If no electric potential is measured, replace the controller
3. The 4-way valve is out of order		3. Check the voltage in the electrical wiring to the 4-way valve. If electric potential is measured, replace the coil. If the problem persists, have the heat pump checked by a refrigeration technician

Problem :	the heat pump doesn't stop	
Observation:	the screen displays the temperature but no error codes	
Possible cause		Solution
1.Wrong setting of parameters		1.Check the set parameters and adjust them if necessary (settings just above the capacity of the heat pump)
2. Pressure switch out of order		2. Check operation of the pressure switch by turning off the filter pump and restarting it. If the heat pump doesn't react to this, the pressure switch must be adjusted or replaced.
3. Electrical failure		3. Contact your installer

Problem :	water leak	
Observation:	there's an amount of water under the heat pump	
Possible cause		Solution
1.Condensation due to atmospheric humidity		1.No action required
2.Water leak		2.Try to localize the leak and check for the presence of chlorine in the water. If that is the case, the heat pump must be temporarily replaced during repair.

Problem :	abnormal amount of ice formed on the evaporator	
Observation:	the evaporator is for the most part covered in ice	
Possible cause		Solution
1.Insufficient air inflow		1.Check the location of the heat pump and remove any dirt that could be present on the evaporator
2.High water temperature		2.If the pool water is already quite hot (warmer than 29°),the probability of ice formation increases. Lowering the set temperature is a possible option
3.Incorrect setting of automatic defrost control		3.Check the setting of the defrosting function together with your installer.
4.The 4-way valve is out of order		4.Check the voltage in the electrical wiring to the 4-way valve. If electric potential is measured, replace the coil. If the problem persists, have the heat pump checked by a refrigeration technician.
5.Not enough refrigerant		5.Have the heat pump checked by a refrigeration technician.

5.3 Failure code table for AP board

Wire controller	Protection/Failure	Check	Solution
P1	Inlet water temp. sensor failure	1. Check the connection of inlet water sensor. 2. Check if the sensor is broken.	1. Reconnect the sensor. 2. Replace the sensor.
P2	Outlet water temp. sensor failure	1. Check the connection of outlet water sensor. 2. Check if the sensor is broken.	1. Reconnect the sensor. 2. Replace the sensor.
P3	Coil temp. sensor failure	1. Check the connection of coil temperature sensor. 2. Check if the sensor is broken.	1. Reconnect the sensor. 2. Replace the sensor.
P4	Return gas temp. sensor failure	1. Check the connection of return gas temperature sensor. 2. Check if the sensor is broken.	1. Reconnect the sensor. 2. Replace the sensor.
P5	Ambient temp. sensor failure	1. Check the connection of ambient temperature sensor. 2. Check if the sensor is broken.	1. Reconnect the sensor. 2. Replace the sensor.
P7	Winter anti-freeze protection I	No action required	
P7	Winter anti-freeze protection II	No action required	
E1	High pressure protection	1. Check if high pressure switch is broken 2. Check if there is a blockage in water circuit or water flow is not enough. 3. Check if there is a blockage in refrigerant circuit.	1. Replace high pressure switch. 3. Remove cause of blockage or increase water flow. 4. Send heat pump to dealer for detailed check.
E2	Low pressure protection	1. Check if low pressure switch is broken. 2. Check if refrigerant level is low. 3. Ambient temp. and water inlet temp. is too low.	1. Replace low pressure switch. 2. Fill up with enough refrigerant. 3. Decrease water flow. 4. Send heat pump to dealer for detailed check.
E3	Water flow switch failure	1. Check if wiring connection of flow switch is in correct position. 2. Check water flow. 3. Check if flow switch is broken. 4. Check if water pump is working.	1. Reconnect the wiring. 2. Increase water flow. 3. Replace flow switch. 4. Repair or replace water pump.
E4	Order of phases incorrect (only for 3 phase model)	Order of phases incorrect	Reconnect the phases in right order.
E8	Communication failure	Check the connection	Reconnect the connection wire.
E12	Outlet water temp. over low protection	1. Check if there is any jam in the water circuit.	1. Remove the jam.
E13		2. Check if the water flow volume is enough. 3. Check if the water pump has failed to work.	2. Increase the water flow volume. 3. Repair or replace the water pump.
E14	Outlet water temp. superheat protection Protection for excessive temp. difference between water inlet & outlet	1. Check if there is any blockage in the water circuit. 2. Check if the water flow volume is enough. 3. Check if the water pump is working.	1. Remove the cause of the blockage. 2. Increase the water flow volume. 3. Repair or replace the water pump.

6.EXPLODED VIEW

See IMAGE 19(page 12)

7.PRODUCT RECYCLING

This unit has a refrigeration gas in liquid state and electrical components. When the heat pump reaches the end of its service life, it should be dismantled by an authorised company or it should be sent to the place selected by the local authorities.



With the aim of reducing the amount of electrical and electronic equipment residues and the danger of their components, to promote the recycling of the equipment and the appreciation of their residues, and to determine a suitable management that attempts to improve the effectiveness of the environmental protection, a series of regulations applicable to the manufacturing of the product and others related to the correct environmental management when they become residues have been implemented.

It is also envisaged to improve the environmental behaviour of all the agents involved in the service life of the electrical and electronic equipment, such as the producers, distributors, users, and, specially, those agents directly involved in the management of the residues derived from this equipment.

As of 13 August 2005, when you wish to throw away this unit, you have two possible return systems:

- If you acquire a new one that is of an equivalent type or it has the same functions as the one thrown away, you could hand it over at no cost to the distributor.
- Or you could take it to the place so selected by the local authorities.

The units are labelled with the symbol of a “crossed out wheeled rubbish container “. This symbol denotes the need for its selective and differentiated collection from the rest of urban rubbish. Possible effects over the environment or human health of the dangerous materials it may contain.


PVC

The most used plastifying agent in the different PVC applications is the DEHP (di-2-ethyl hexyl phthalate). The tests conducted in different laboratories demonstrate that it does not present risks for human health in the concentration levels so used in finished articles, according to the information from the German BUA (Advisory Body for the Relevant Environment of the Existing Substances) and the VGA (German Health Authority) among others. The results of these tests, together with the data collected in biodegradation studies, confirm that the DEHP cannot be considered dangerous for the environment. All additives used in the PVC formulations and therefore in the food industry applications are perfectly regulated at both European and Spanish level.



In Europe, the EC Directive 90/128/EU, later modified by the 95/3/EU. In Spain, we should meet the Royal Decrees 1125/1982 of 30 April 1982, later confirmed by the 1042/1997 of 27 June 1982. The service life analyses (SLA) demonstrate that the environmental impact of the PVC is equivalent or even more favourable than those corresponding to other materials.

8. EXPLODED DIAGRAM

EVOLine 6

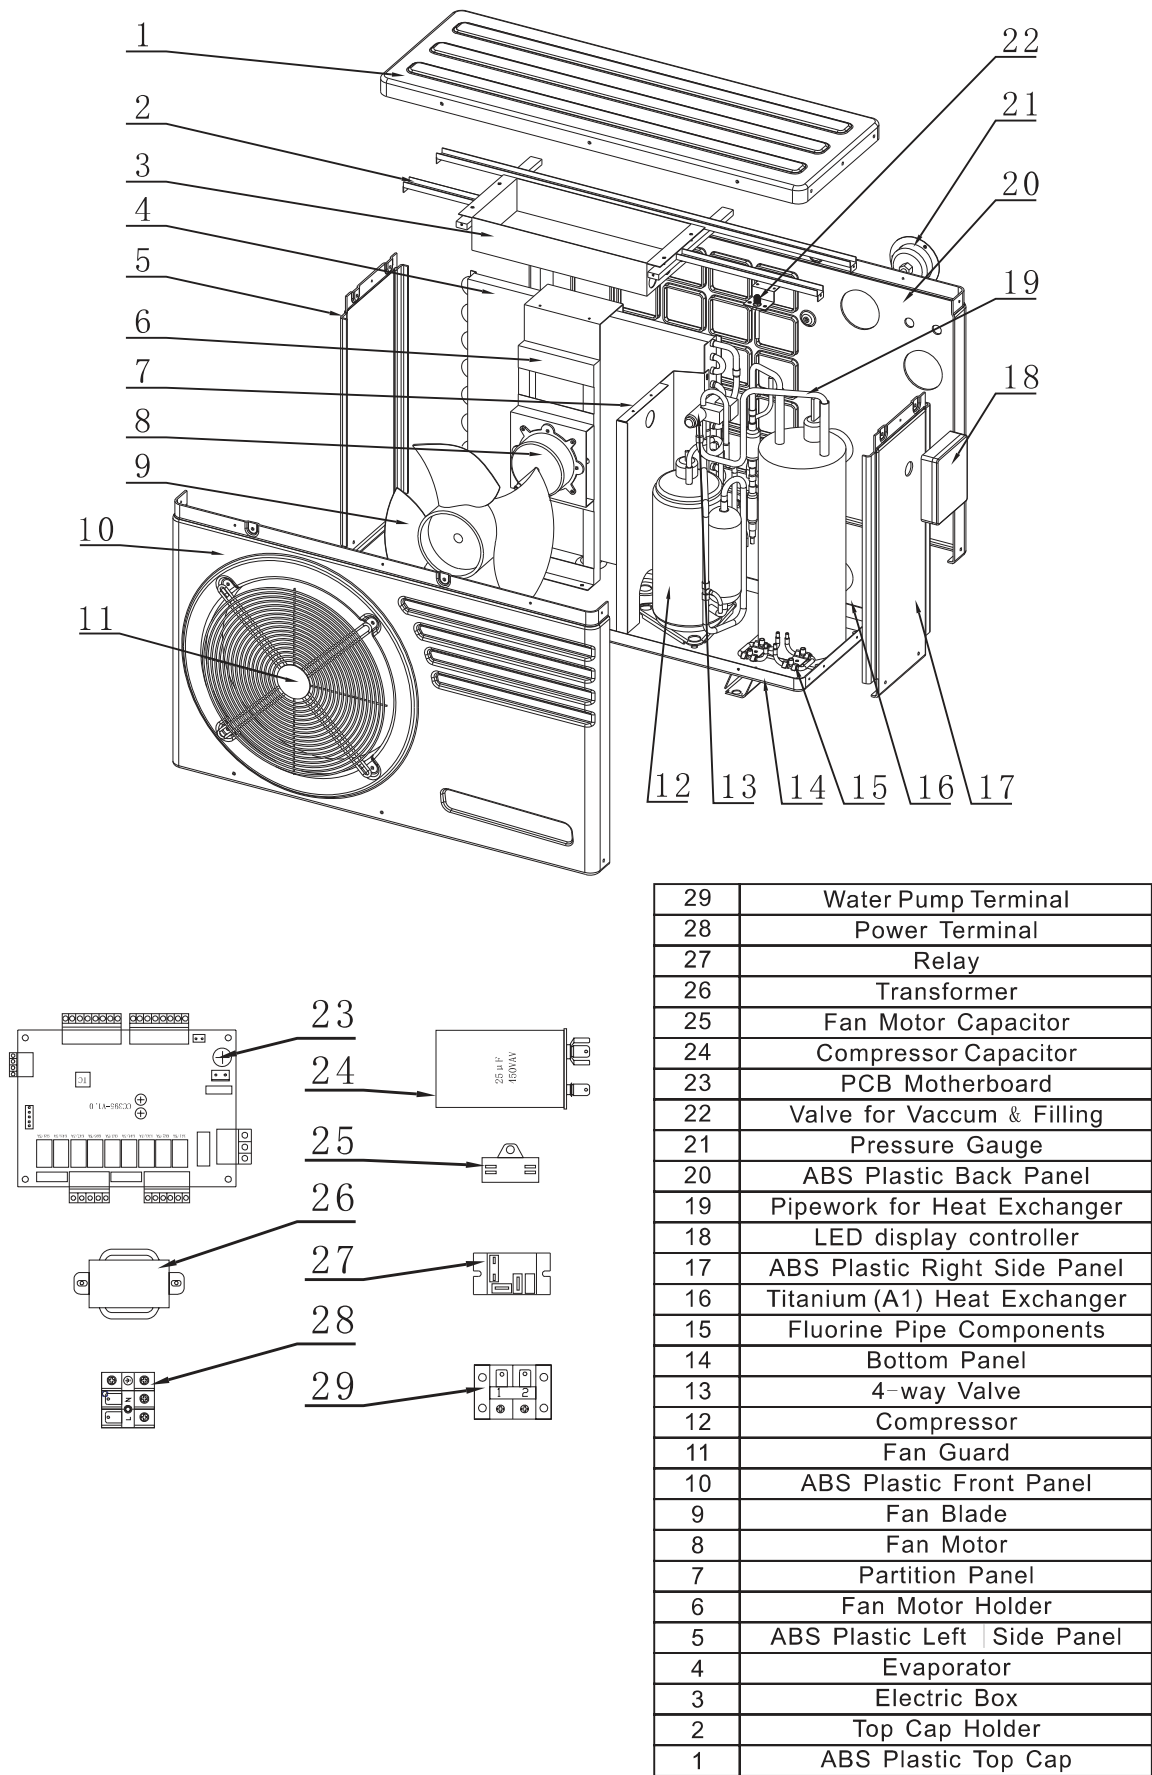


EVOLine 10

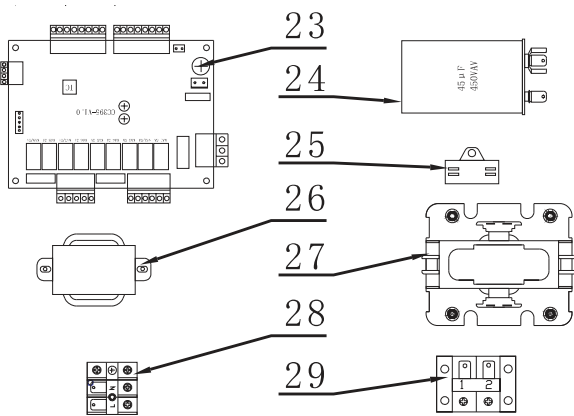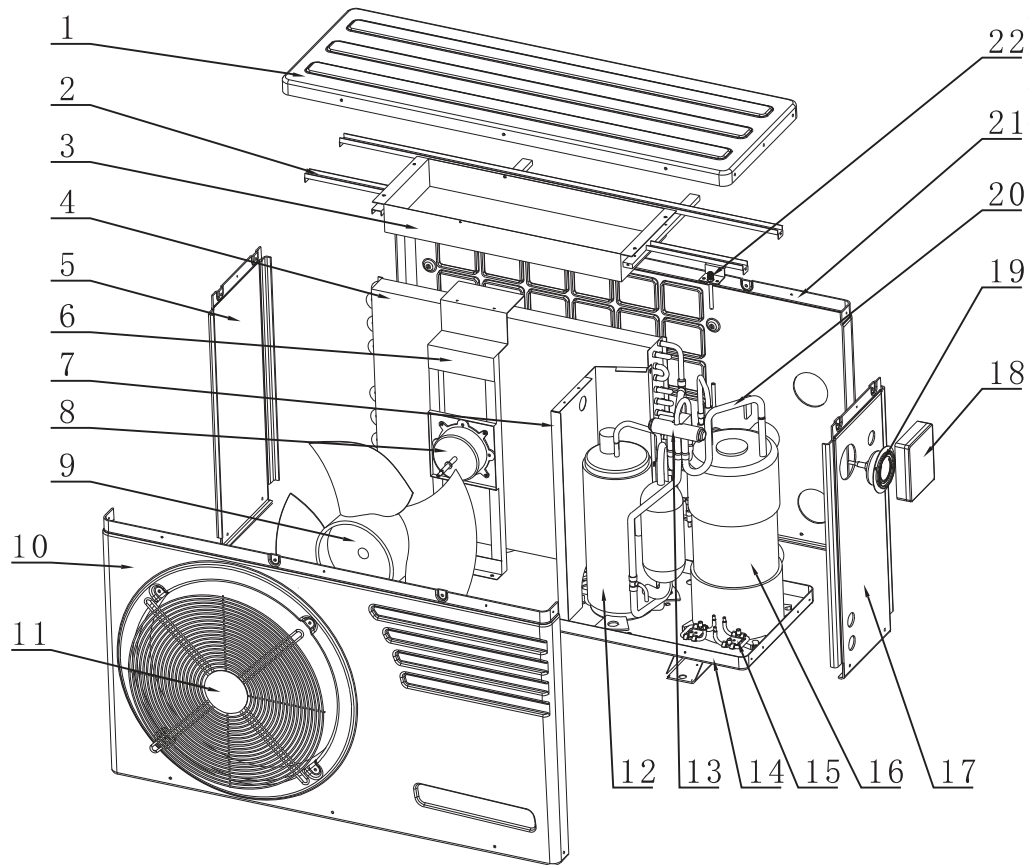


29	Water Pump Terminal
28	Power Terminal
27	AC Contactor for Single Phase
26	Transformer
25	Fan Motor Capacitor
24	Compressor Capacitor
23	PCB Motherboard
22	Valve for Vacuum & Filling
21	ABS Plastic Back Panel
20	Pipework for Heat Exchanger
19	Pressure Gauge
18	LED display controller
17	ABS Plastic Right Side Panel
16	Titanium (A1) Heat Exchanger
15	Fluorine Pipe Components
14	Bottom Panel
13	4-way Valve
12	Compressor
11	Fan Guard
10	ABS Plastic Front Panel
9	Fan Blade
8	Fan Motor
7	Partition Panel
6	Fan Motor Holder
5	ABS Plastic Left Side Panel
4	Evaporator
3	Electric Box
2	Top Cap Holder
1	ABS Plastic Top Cap


EVOLine 13

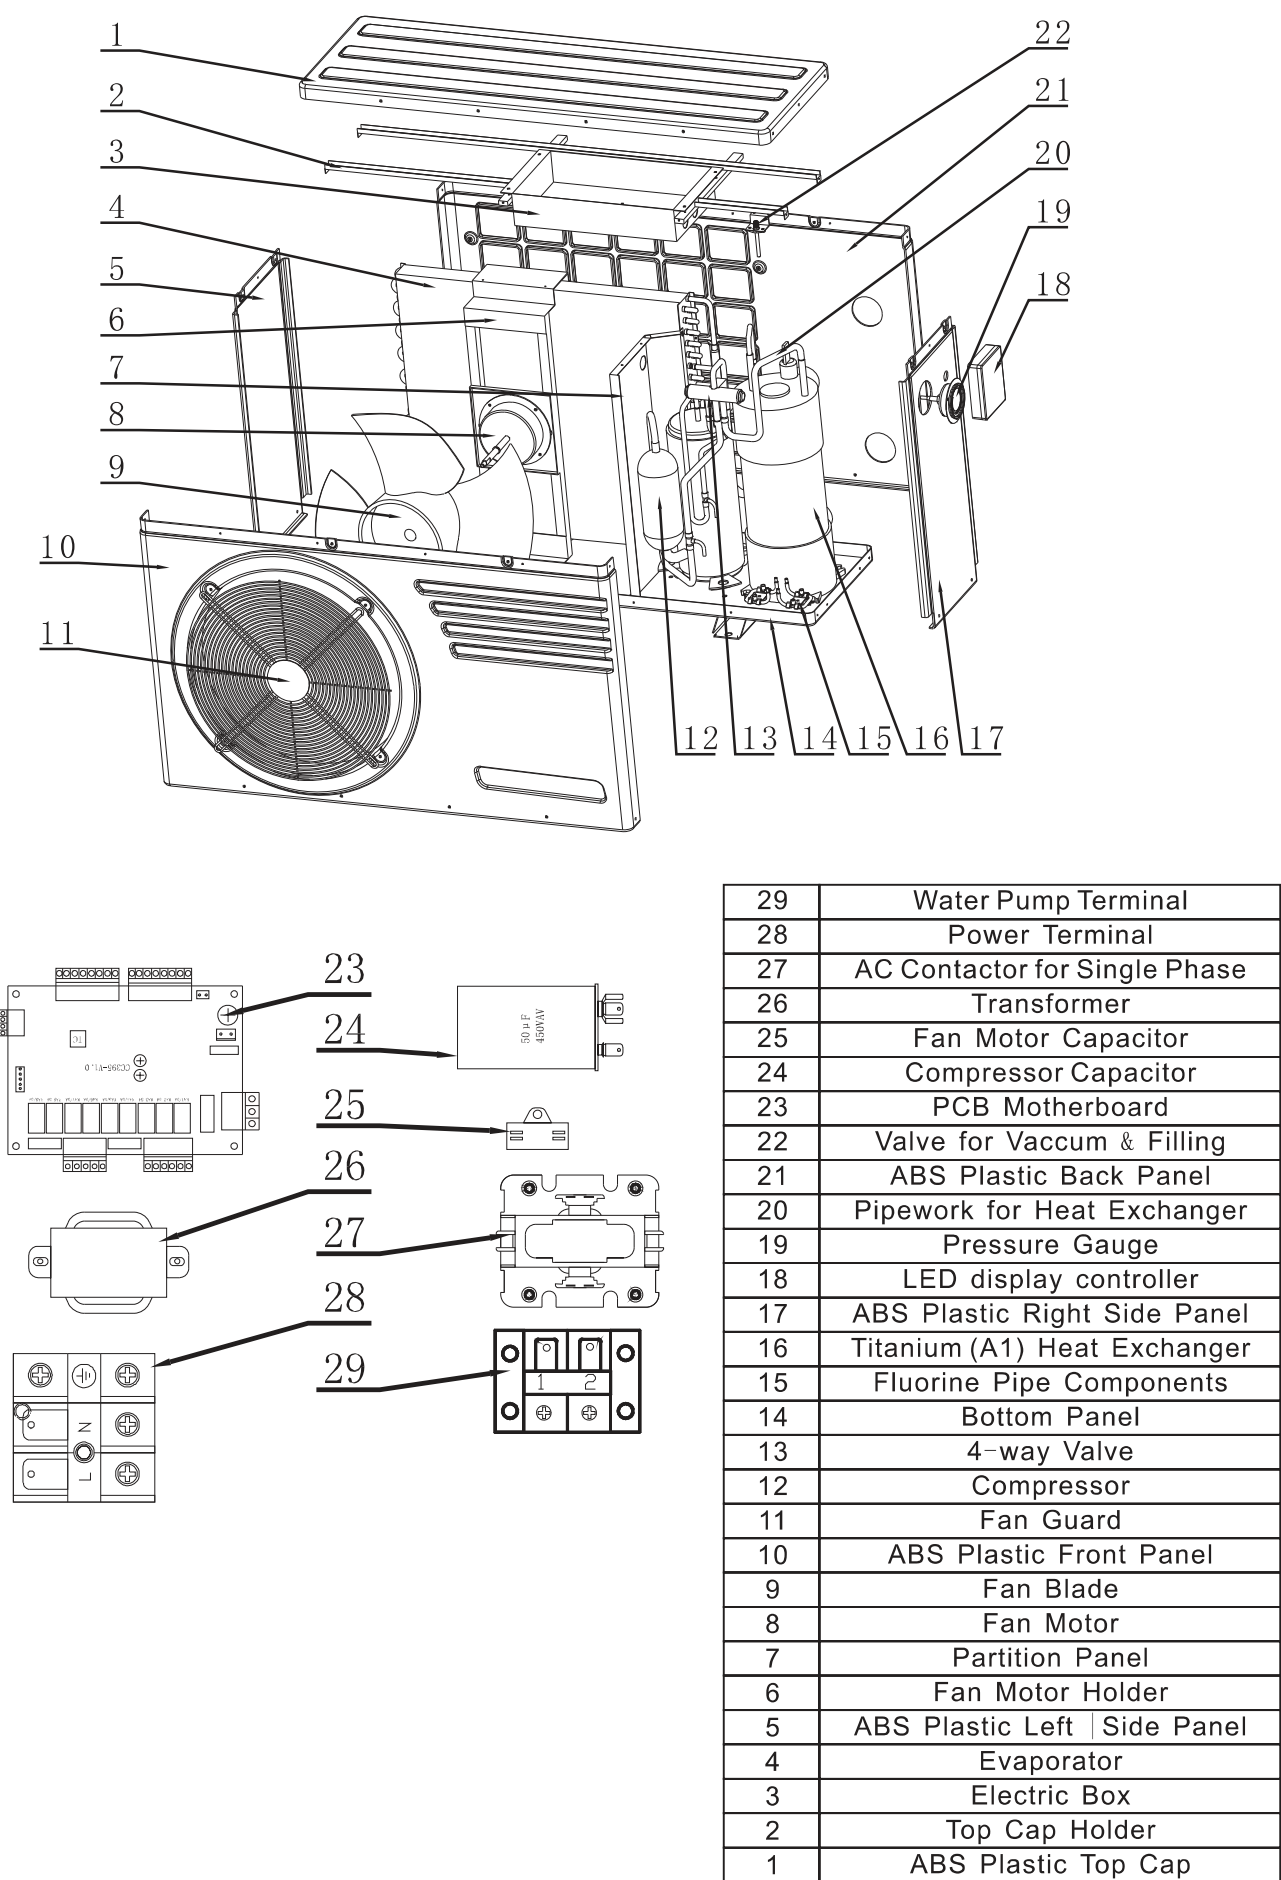



EVOLine 15

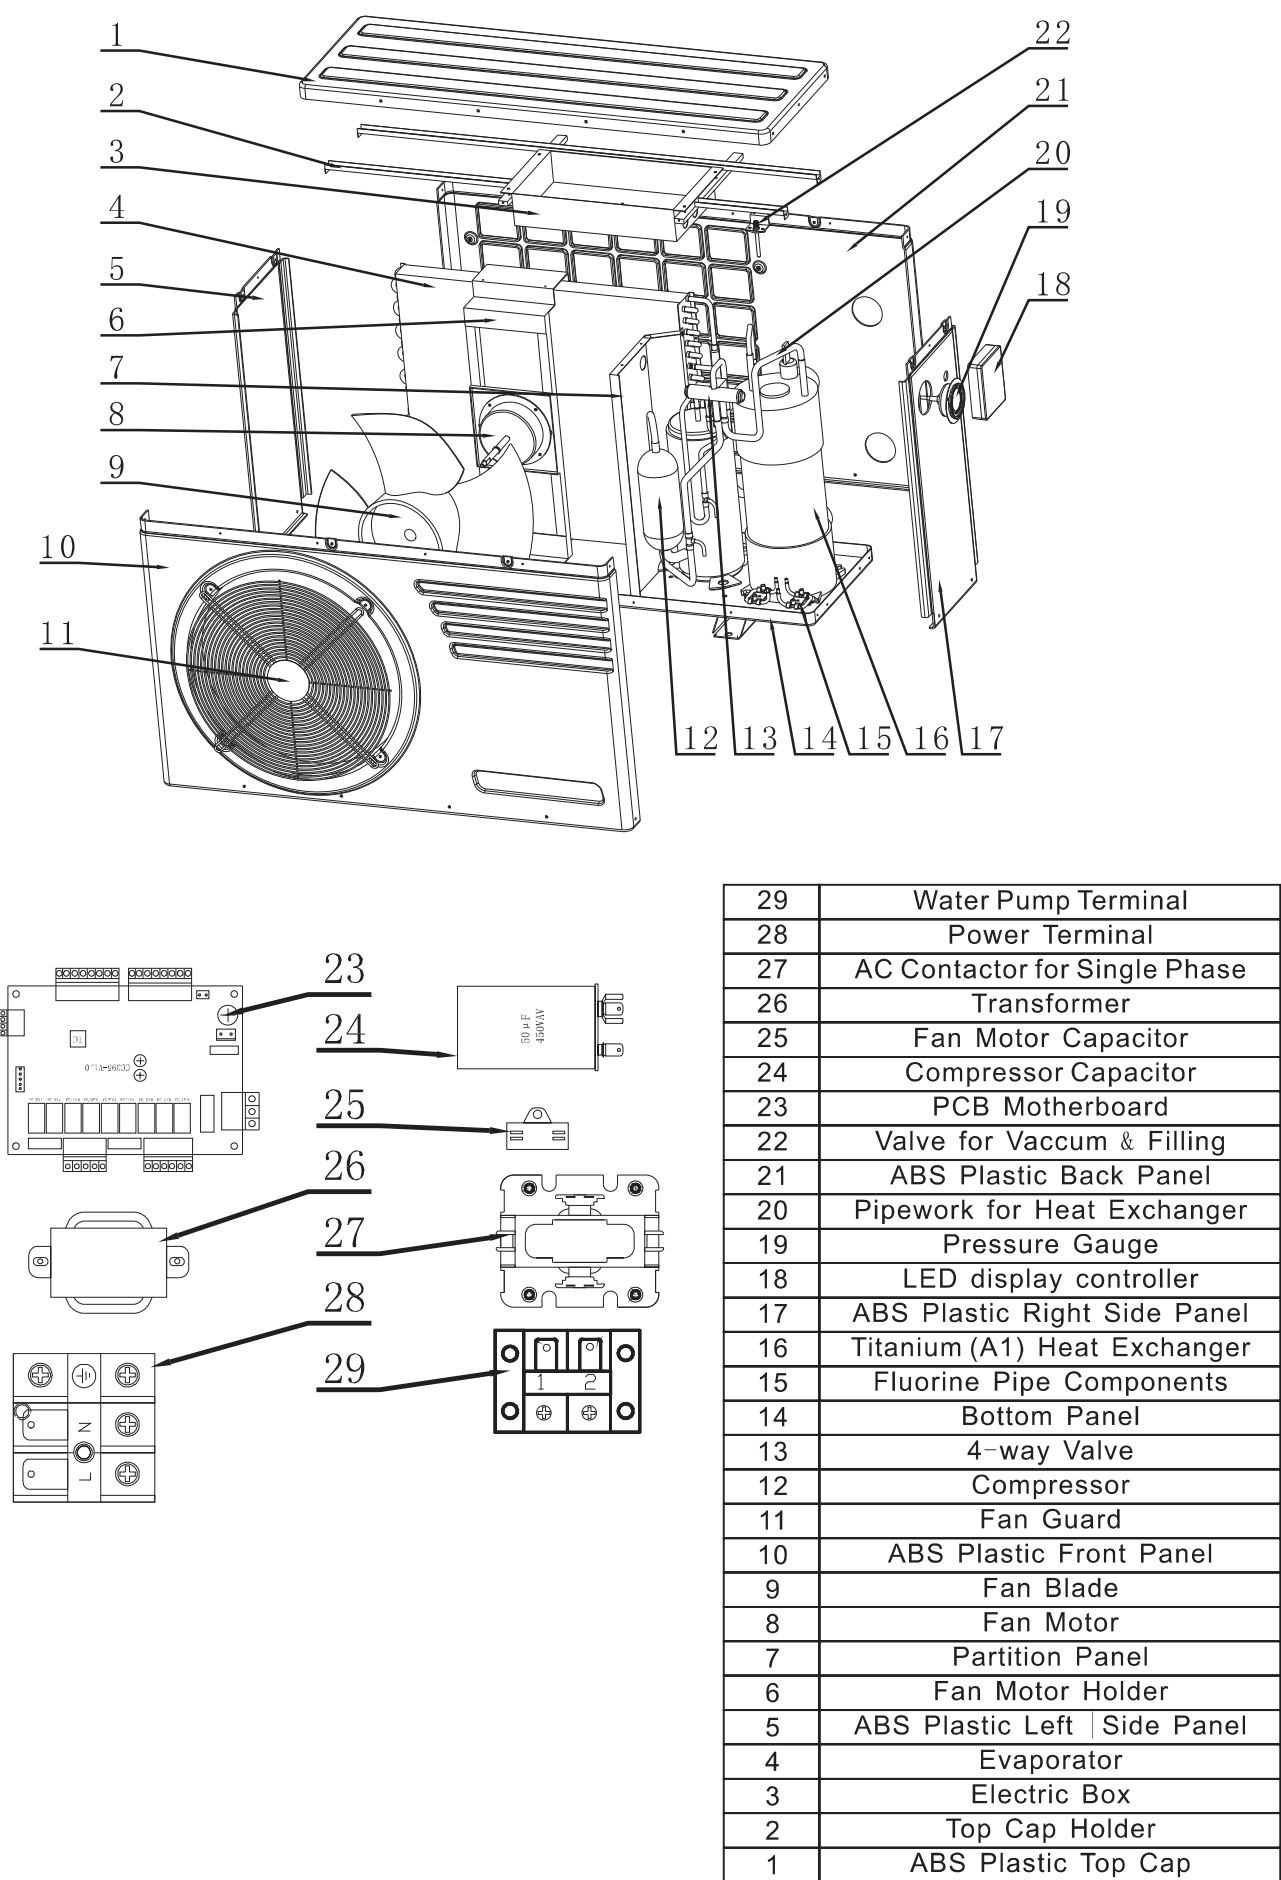


EVOLine 20

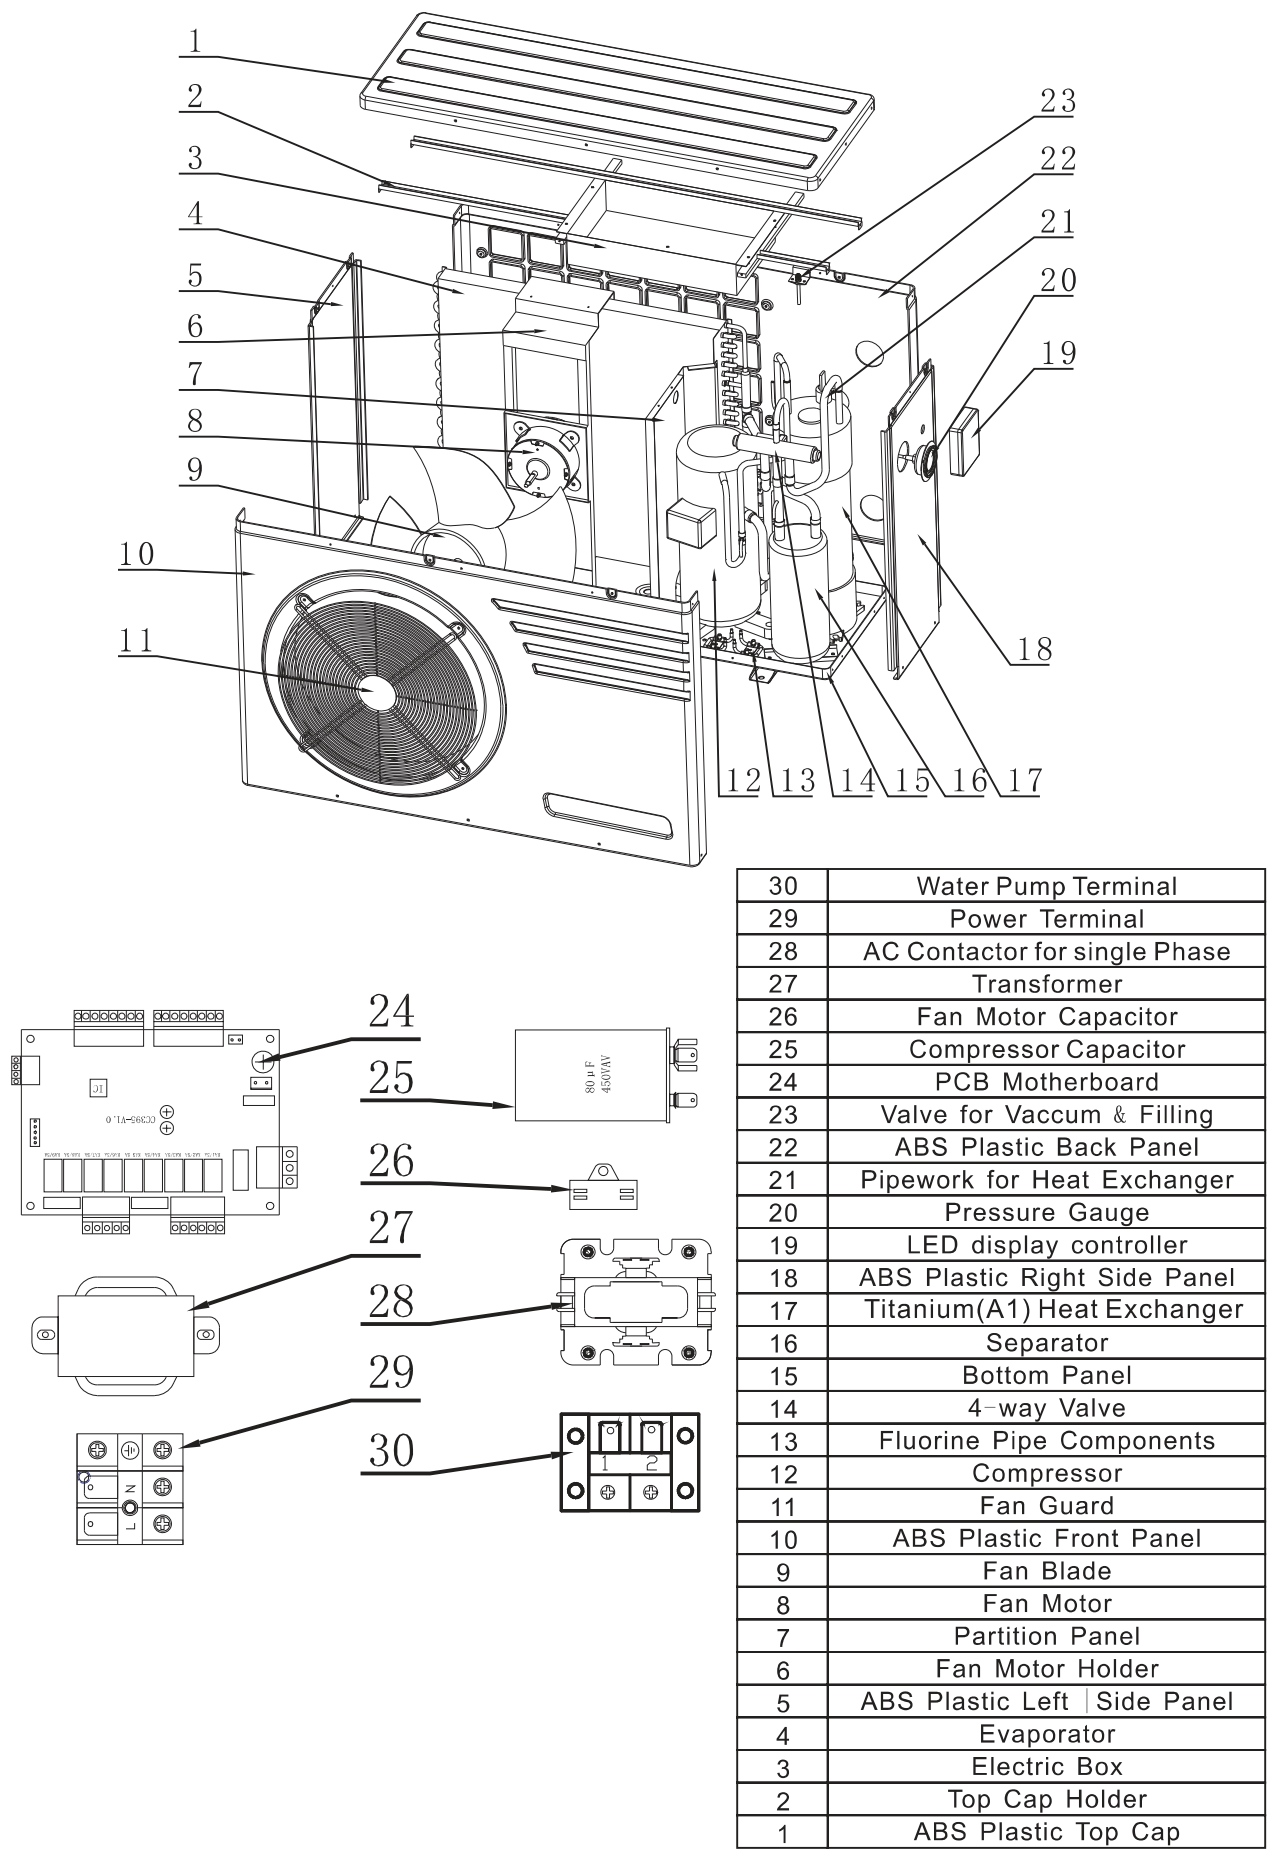

EVOLine 25

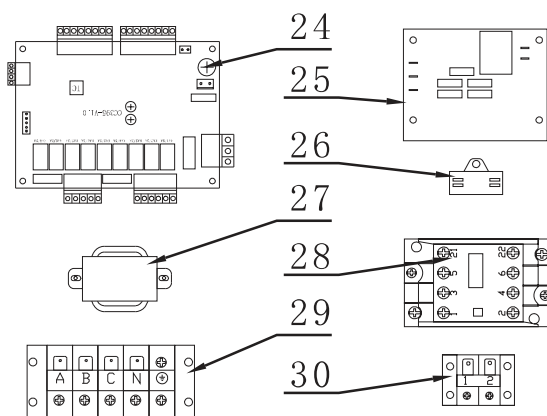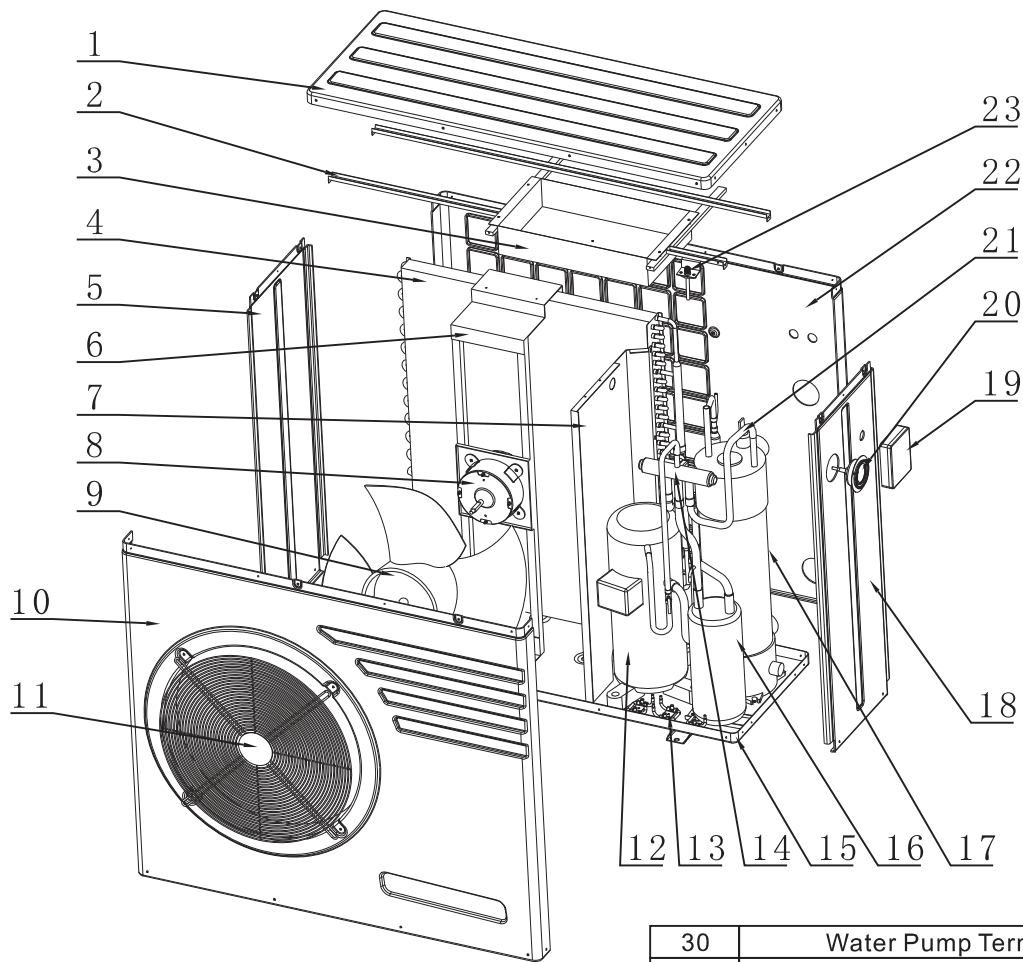


30	Water Pump Terminal
29	Power Terminal
28	AC Contactor for 3 Phase
27	Transformer
26	Fan Motor Capacitor
25	Phase Protection Board
24	PCB Motherboard
23	Valve for Vaccum & Filling
22	ABS Plastic Back Panel
21	Pipework for Heat Exchanger
20	Pressure Gauge
19	LED display controller
18	ABS Plastic Right Side Panel
17	Titanium (A1) Heat Exchanger
16	Separator
15	Bottom Panel
14	4-way Valve
13	Fluorine Pipe Components
12	Compressor
11	Fan Guard
10	ABS Plastic Front Panel
9	Fan Blade
8	Fan Motor
7	Partition Panel
6	Fan Motor Holder
5	ABS Plastic Left Side Panel
4	Evaporator
3	Electric Box
2	Top Cap Holder
1	ABS Plastic Top Cap

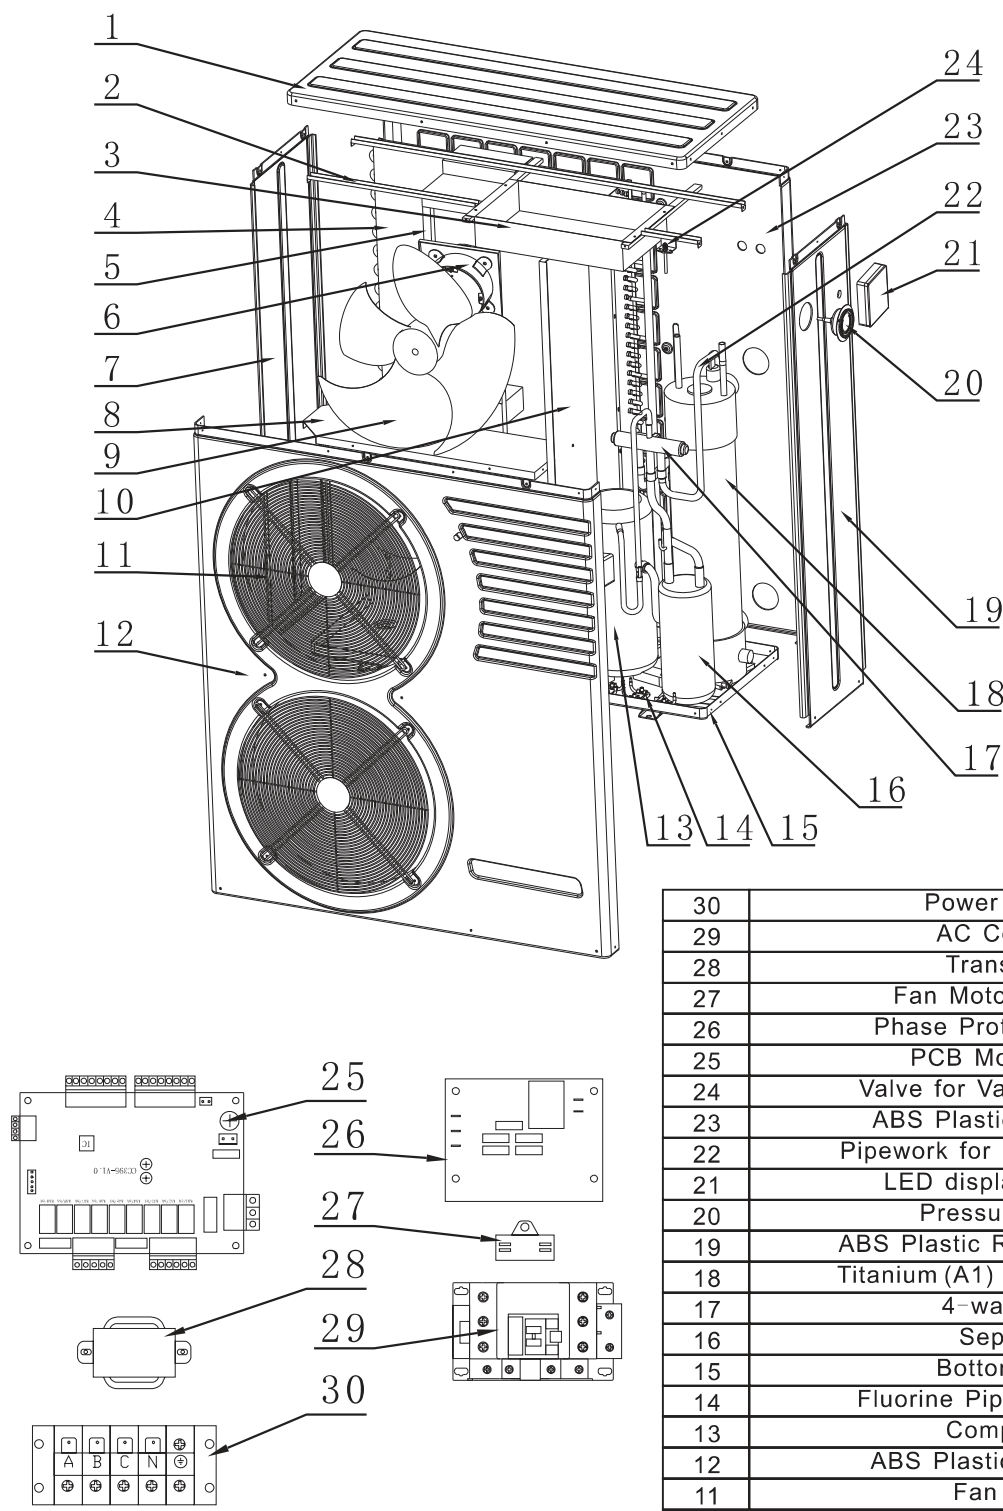


30	Power Terminal
29	AC Contactor
28	Transformer
27	Fan Motor Capacitor
26	Phase Protection Board
25	PCB Motherboard
24	Valve for Vaccum & Filling
23	ABS Plastic Back Panel
22	Pipework for Heat Exchanger
21	LED display controller
20	Pressure Gauge
19	ABS Plastic Right Side Panel
18	Titanium (A1) Heat Exchanger
17	4-way Valve
16	Separator
15	Bottom Panel
14	Fluorine Pipe Components
13	Compressor
12	ABS Plastic Front Panel
11	Fan Guard
10	Partition Panel
9	Fan Blade
8	Junction Plate for ABS Plastic Front Pane
7	ABS Plastic Left Side Panell
6	Fan Motor
5	Fan Motor Holder
4	Evaporator
3	Electric Box
2	Top Cap Holder

FIGURE 1 – POWER CONNECTION

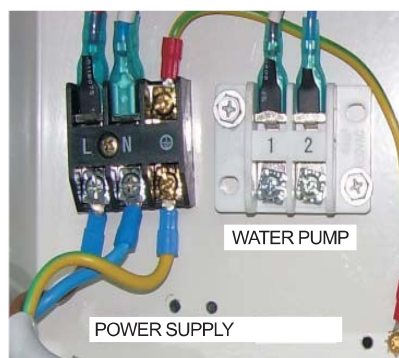

230V / 1ph / 50Hz

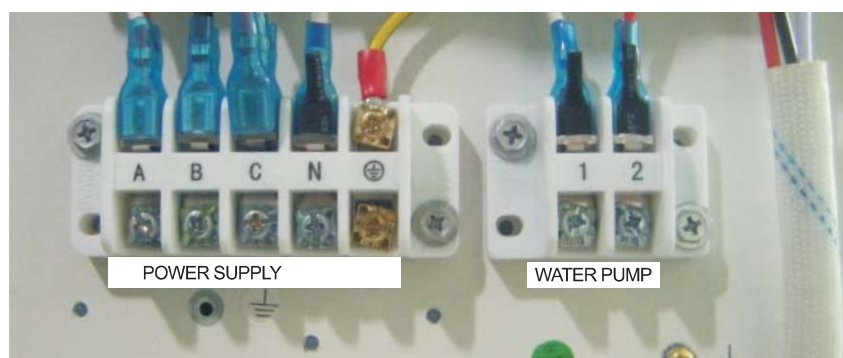

380-400V / 3ph / 50Hz

Model	Codes	Voltage(volt)	Fuse T3/ slow blow (A)	Nominal current (A)	Cable diameter (mm ²)(for max. Length of 20 meters)
EVOLine 6	66069	220 - 240	10	4.5	2 x 1.5 mm ² + Ground
EVOLine 10	66070	220 - 240	16	7.3	2 x 2.5 mm ² + Ground
EVOLine 13	66071	220 - 240	16	9.5	2 x 2.5 mm ² + Ground
EVOLine 15	66072	220 - 240	16	15.9	2 x 6.0 mm ² + Ground
EVOLine 20	66073	220 - 240	25	16.8	2 x 6.0 mm ² + Ground
EVOLine 25	66074	380 - 400	16	7.1	4 x 2.5 mm ² + Ground
EVOLine 35	66075	380 - 400	16	10.1	4 x 2.5 mm ² + Ground

A la atención de nuestros clientes

1. Estimado cliente, lea detenidamente este manual antes de instalar el producto, de lo contrario puede provocar daños a la bomba de calor o causar lesiones a los usuarios, así como ocasionar una pérdida económica.

2. Con el desarrollo de la ciencia y la tecnología, el producto también mejorará, de manera que le invitamos a que se mantenga actualizado con los últimos productos.

3. Si necesita más información técnica, póngase en contacto con nuestro distribuidor local.

4. Atención:

4.1 Antes de instalar la bomba de calor, compruebe si el suministro eléctrico local se corresponde con los requisitos de la bomba de calor.

Para obtener más detalles, compruebe la etiqueta de la unidad o la información de rendimiento que aparece en este manual.

4.2 Instale los dispositivos de protección eléctrica conforme a la normativa local.

4.3 Debe conectar la bomba de calor a una toma de tierra con el fin de prevenir descargas eléctricas ocasionadas por un cortocircuito inesperado dentro de la unidad.

4.4 En este manual le proporcionamos un diagrama de cableado eléctrico.

4.5 Por motivos de seguridad, no cambie ni repare la bomba de calor usted mismo. Si fuera necesario, póngase en contacto con su distribuidor local para solicitar su ayuda.

4.6 No coloque objetos dentro de la bomba de calor mientras esté en marcha. Pueden entrar en contacto con el ventilador y dañarlo, así como provocar accidentes (especialmente en el caso de los niños).

4.7 No use la bomba de calor sin la rejilla o placa, porque podría provocar accidentes o un funcionamiento anómalo de la unidad.

4.8 Si la unidad está llena de agua, póngase en contacto con su distribuidor local inmediatamente.

La unidad solo puede reiniciarse después de una inspección completa por parte de técnicos profesionales.

4.9 No está permitido que técnicos no cualificados ajusten conmutadores, válvulas o controladores en la unidad.

Índice

1. Prestaciones e instalación

1.1 Prestaciones y características.....	1
1.2 Principios de funcionamiento.....	1
1.3 Colocación de la bomba de calor.....	2
1.4 Distancia a la piscina.....	3
1.5 Instalación de la válvula antirretorno.....	3
1.6 Configuración de la instalación de la piscina.....	4
1.7 Conexión del by-pass.....	4
1.8 Aviso.....	5
1.9 Primera puesta en marcha.....	6
1.10 Condensación.....	6

2. Control de la bomba de calor

2.1 Manejo de la pantalla de control.....	7
2.1.1 Ilustración de la pantalla de control.....	7
2.1.2 Encendido/apagado (ON/OFF) de la bomba de calor.....	8
2.1.3 Cómo cambiar el modo.....	8
2.1.4 Ajuste de la temperatura del agua deseada.....	9
2.1.5 Comprobación y ajuste de parámetros.....	9
2.1.6 Configuración de la hora.....	9
2.1.7 Configuración encendido/apagado del temporizador.....	10
2.1.8 Cancelación de la hora de apagado del temporizador.....	10
2.1.9 Bloqueo del teclado.....	10
2.2 Funcionamiento del controlador de la APP.....	13
2.2.1 Principio de funcionamiento del control de la APP.....	13
2.2.2 Configuración de red.....	13
2.2.3 Funcionamiento de la APP.....	15

3. Sistemas de protección

3.1 Conmutador de flujo de agua.....	19
3.2 Protección contra alta y baja presión del gas refrigerante.....	19
3.3 Protección contra sobrecalentamiento del compresor.....	19
3.4 Control de descongelación automática.....	19
3.5 Diferencia de temperatura entre flujo de agua entrante y saliente.....	19
3.6 Desconexión por baja temperatura.....	19
3.7 Protección anticongelante durante el invierno.....	19
3.8 Primera protección anticongelante.....	19
3.9 Segunda protección anticongelante.....	19

4. Dirección

4.1 Química del agua de la piscina.....	20
4.2 Hibernación de la bomba de calor.....	20
4.3 Reinicio de la bomba después del invierno.....	20
4.4 Comprobación.....	21

5. Mantenimiento e inspección

5.1 Mantenimiento.....	21
5.2 Guía de resolución de problemas.....	21
5.3 Tabla de código de errores para base AP.....	24

6. Placa de identificación y diagrama de cableado

6.1 Placa de identificación.....	25
6.2 Diagrama de cableado.....	26