

Repair instruction

Description: SC234/200 Seal automatic vent

Part number: 21528

Look for Service Centres, Point of Sale addresses and other information on: www.thetford-europe.com

Version:	1
Date:	April 2010
Tools required:	-


A

Turn automatic vent and take it out completely.



B

Press upper automatic vent in, so that the foam can be taken off. This can be done by turning.

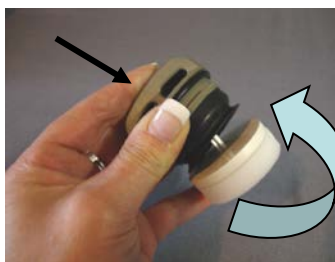

Now take both seals off.



C

Follow steps in reverse for assembling the new seals.