

INSTALLATION MANUAL OF SLIDING WINDOW AND BLIND

Installation

Step 1: Check whether the window size match the vehicle installation hole.
Minimum wall thickness is 30mm.




Step 2: Please apply polyurethane sealant
Evenly to the border of the frame.



Step 3: The window is aligned with the installation hole and then pushed flat against the installation hole. A second person should push against from the outside until the screws are fixed .



Step 4: To install the window to the vehicle, cross groove pan head self-tapping screws via the installation frame from the inside. Tighten screws crosswise .

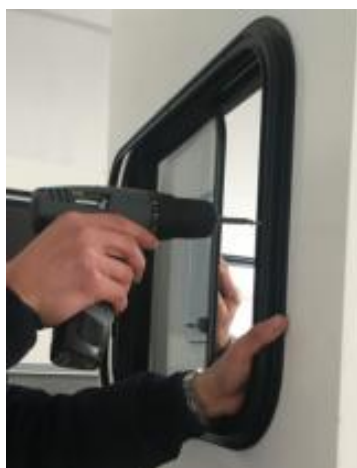

INSTALLATION MANUAL OF SLIDING WINDOW AND BLIND

Step 5: The square frame is aligned with the window, install this frame to window with ST4X20 cross groove pan head self-tapping screws via the installation hole of square frame.



Step 6: The blind is aligned with the installation hole, evenly distance from top to bottom to side of installation hole, there is groove between the inner edge of blind with window to match up the installation. Note: the darkening blind on the lower side, mosquito screen on the upper side.



Step 7: Remove the PVC strip before installation.



INSTALLATION MANUAL OF SLIDING WINDOW AND BLIND

Step 8: Install the blind to the square frame with ST4X20 cross groove countersunk head self-tapping screw via installation groove of blind.



Step 9: Install all PVC strips.



Step10: Finally, remove the protective film and the plug of the water hole at the bottom of the window.

