


INSTALLATION INSTRUCTIONS



- 01** Check whether the window size matches the vehicle's installation hole. Wall thickness should be between 22 and 35mm.



- 02** For the best adhesion result, we recommend using polyurethane (PU) sealant. Apply evenly to the frame.

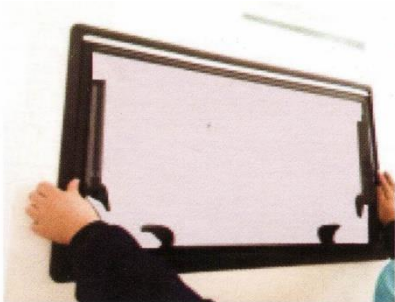


- 03** Align the window with the installation frame and push flat. This may be easier with two people!




- 04** Use self-tapping screws to install the window to the vehicle.



- 05** Pull the two ends of the white ribbon to remove the PVC plastic trim from the blinds frame, revealing the installation groove.

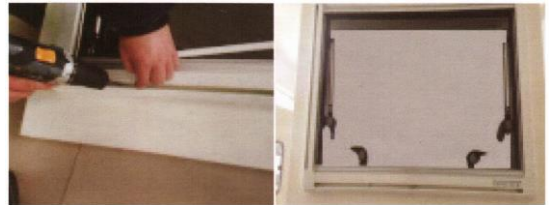

- 06** Install the blinds to the vehicle using countersunk self-tapping screws in the installation groove.

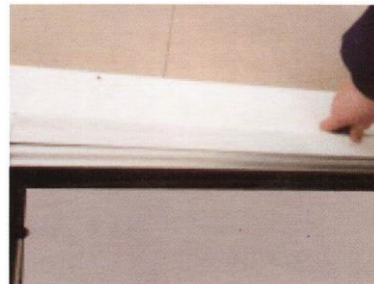

- 07** After installation, clip the PVC strip back in to conceal the screws.



- 08** If required, use the rotating shafts at each corner to adjust the tension of the blinds.

