

Repair instruction

Description: Switch C2/C3

Part number: 20107

Look for Service Centers, Point of Sale addresses and other information on: www.thetford-europe.com

Version:

V1

Date:

08/05/2006

Tools required:



+ wire stripper + shrink pliers

A

C2/C3 Toilet.

Pull the waste tank out of the toilet by pushing down the yellow clip.


Remove the plug from the flush knob with a flat screwdriver.



B

Remove the screw in the flush knob with a long Philips head screwdriver.


Remove the four screws from the mechanism inside the toilet.

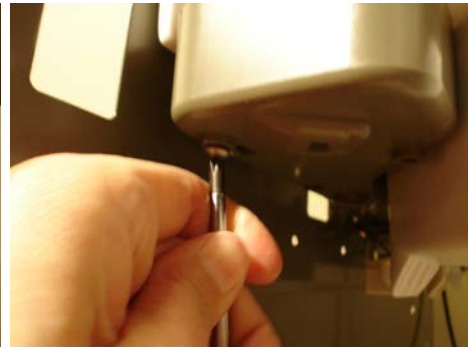

C


Remove the switch cover.

Pull out the cable from the saddle.

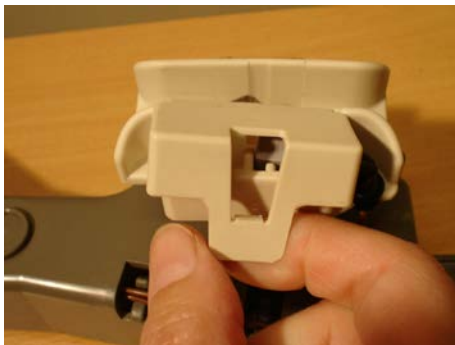

D


Cut the two cables from the switch.

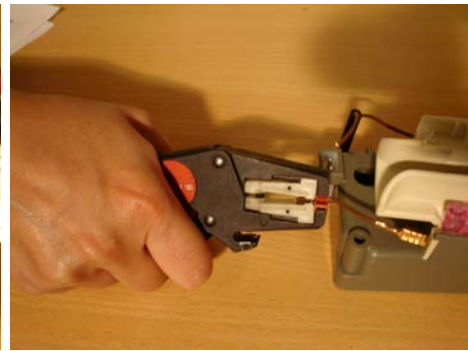

Strip the both wires with a wire stripper.

E

Pull the cables into the connectors from the new switch.

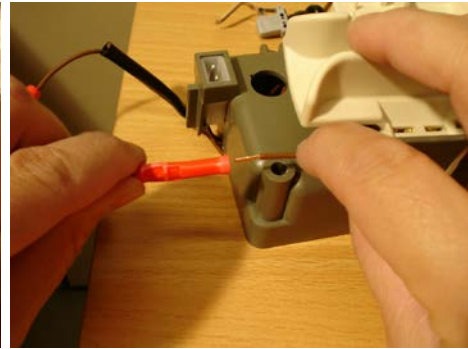

F

Connect the connectors from the new switch on the cables with the shrink pliers.

Pull back the cable into the saddle.



G

Place the new switch back in his position.

Replace the switch cover.



H

Replace the four screws from the mechanism inside the toilet.

Replace the screw in the flush knob with a long Philips head screwdriver.



I

Replace the plug from the flush knob.

Replace waste tank back into the toilet.

